



Product Manual

MIOLA Panel v3.3



Document Version: 1.0

Last Update: 13.07.2026

CONTENTS

1. Connection to Programming Interface	4
1.1. Introduction	4
1.2. Network Connections	4
1.3. Firmware Update	5
1.4. Web Interface Login	6
1.5. Programming Interface Overview	7
2. System Settings	8
2.1. Introduction	8
2.2. Project Import / Export	8
2.2.1 Export	8
2.2.2 Import	9
2.3. General	10
2.3.1. Project Settings	10
2.3.2. Device Settings	10
2.3.3. ScreenSaver Settings	10
2.3.4. Weather Settings	11
2.3.5. Doorbell & Ringtone Settings	11
2.3.6. Date & Time Settings	11
2.3.7. KNX Settings	12
2.4. Network Settings	13
2.5. RSS Settings	14
2.6. Security Settings	15
3. UI Settings	16
3.1. Introduction	16
3.2. Widgets	16
3.2.1. Enabling Widgets	16
3.2.2. Arranging Widget Order	17
3.2.3. Editing Widgets	17
3.3. Menu Items	18
3.3.1. Enabling Menus	18
3.3.2. Arranging Menu Order	18
4. Drivers	19
4.1. Introduction	19
4.2. Adding New Driver	19
4.3. Editing Drivers	20
4.4. Deleting Driver	20
5. Rooms & Sections	21
5.1. Introduction	21
5.2. Adding New Section	21
5.3. Adding New Room	22
5.4. Editing Rooms	22
5.5. Arranging Room or Section Order	22
5.6. Deleting Rooms	22
5.7. Copy Rooms	23
5.8. Adding Accessory in Room Settings	23
6. Accessories	24
6.1. Introduction	24
6.2. Adding New Accessory	24
6.3. Editing Accessories	28
6.4. Deleting Accessories	28
6.5. Copy Accessories	28
7. Supported Accessory Types	29
7.1. KNX Drivers	29
7.1.1. Switch	30
7.1.2. Dimmer	32
7.1.3. Shutter	34
7.1.4. Advanced Thermostat	36
7.1.5. Punch Button	50
7.1.6. Binary button	52
7.1.7. Sensor	54
7.1.8. Status display	56
7.1.9. RGBW Dimmer	57
7.1.10. AUDIO	59

7.2. System I/O Driver	62
7.2.1. Sensor	62
8. Scenes	64
8.1. Introduction	64
8.2. Creating a New Scene	64
8.3. Editing Scenes	68
8.4. Deleting Scene	68
9. Triggers	69
9.1. Introduction	69
9.2. Adding a New Trigger.....	71
9.3. Editing Triggers	72
9.4. Deleting Triggers.....	72
10. Intercom	73
10.1. Introduction	73
10.2. Intercom Settings	73
10.3. Adding New Contact.....	74
10.4. Editing Contacts.....	75
10.5. Deleting Contacts	75
11. Security Panel	76
11.1. Introduction	76
11.2. Adding New Sensor	76
11.3. Security Panel Settings.....	76
11.4. Adding IP Camera	78
12. Integrator Menu	79
12.1. Activating Method	79
12.2. Functions	79
13. Creating User For Mobile Application	80

1. CONNECTION TO PROGRAMMING INTERFACE

1.1. INTRODUCTION

Configuring Miola Touch Panel with Miola 3.3 operating system are handled via built-in web server. For this, you need to connect your computer and Touch Panel to the same local area network.



No internet connection is required while operating programming interface.

1.2. NETWORK CONNECTIONS

Miola Touch Panels with Miola 3.3. operating system have single or dual Ethernet Network Interface depending on models. Both Ethernet Interface (ETH0, ETH1) use DHCP by default. Follow the steps below to log-in Programming Interface.

Connect to Network with DHCP Server:

- Connect ETH0 or ETH1 Ethernet Network of Touch Panel to the network.
- Go to Touch Panel UI > Settings > App Settings and then get IP Address of Touch Panel.
- Connect your computer to the same network.
- Enter IP address to web browser.

Connect to Network without DHCP Server:

- In this case, Touch Panel needs to have a Static IP Address. Only ETH0 Ethernet Interface is able to configured with Static IP configuration, so use ETH0 Ethernet Interface to connect to network.
- Go to Touch Panel UI > Settings > App Settings. Tap 4 times to App Version to open Integrator Settings (hidden menu). Enter Integrator Password in pop-up window.



Default Integrator Password is **1234**.

- Tap Integrator Settings. Select Static IP, and then assign a free IP Address to the Touch Panel.
- Connect your computer to the same network and then assign another free static IP Address to your computer.
- Enter IP Address of Touch Panel to web browser.




You can directly connect your computer and Touch Panel in case there is not any network established. Then follow steps above to reach Programming Interface

1.3. FIRMWARE UPDATE

Before starting the configuration of Touch Panel, it should be updated to the latest version.


If Touch Panel has internet Access, via On Screen;

- Go to Settings > App Settings
- A warning will appear if there is a new update
- By pressing "UPDATE" button, new version will be downloaded from Miola Cloud and automatically uploaded to the Touch Panel

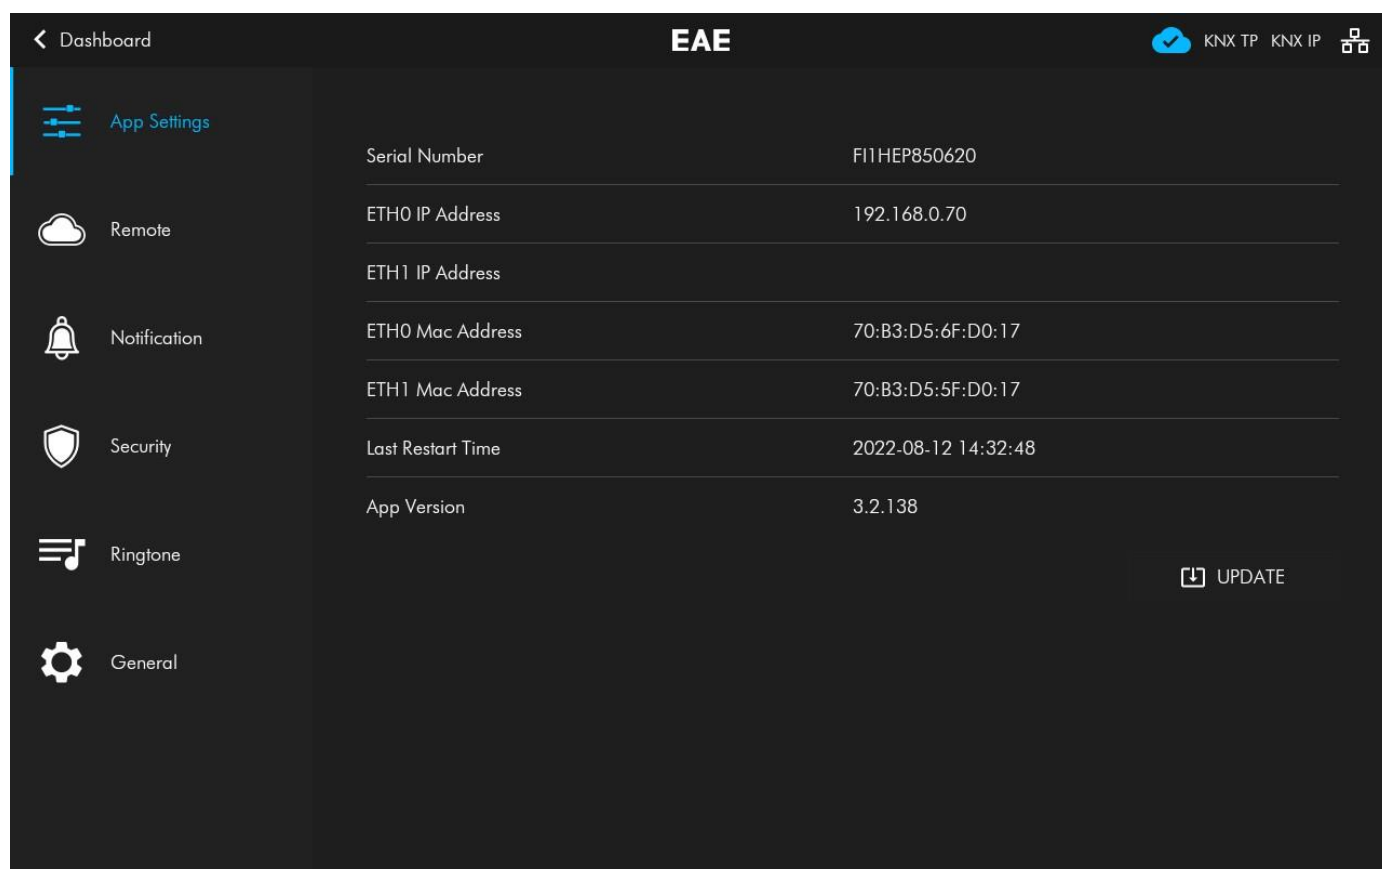

1.4. WEB INTERFACE LOGIN

After completing network configuration, open a web browser in your computer and enter IP Address of Touch Panel. Then you will reach log-in page of Miola 3.3. operating system.

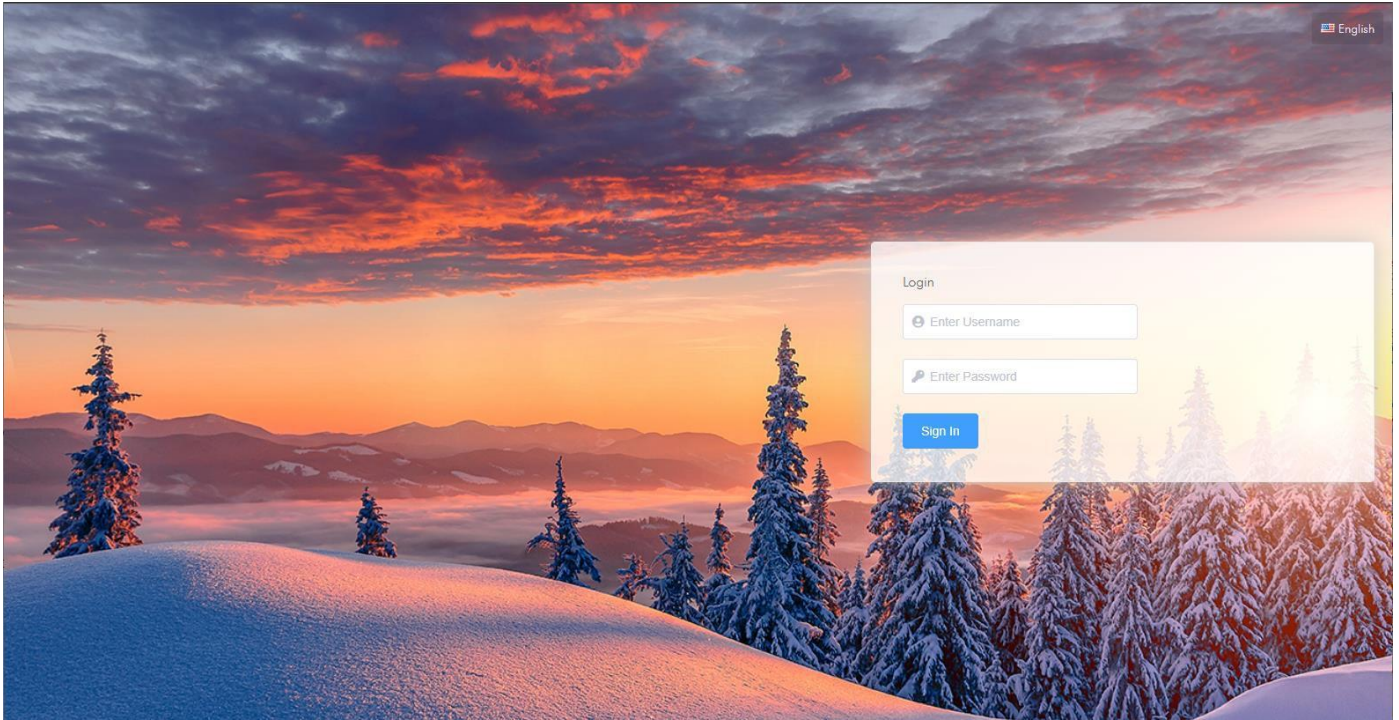

Enter Username and Password to log-in to Interface. Default username and password is below. You can change username and password after log-in to Interface.

Default Username : EAEAdmin

Default Password : EAE1234




You can change language of Programming Interface by clicking button in the upper right corner of log-in page. Supported languages are English and Turkish.



If you can not log-in, delete cookies and search history of web-browser and try to log-in again.

1.5. PROGRAMMING INTERFACE OVERVIEW

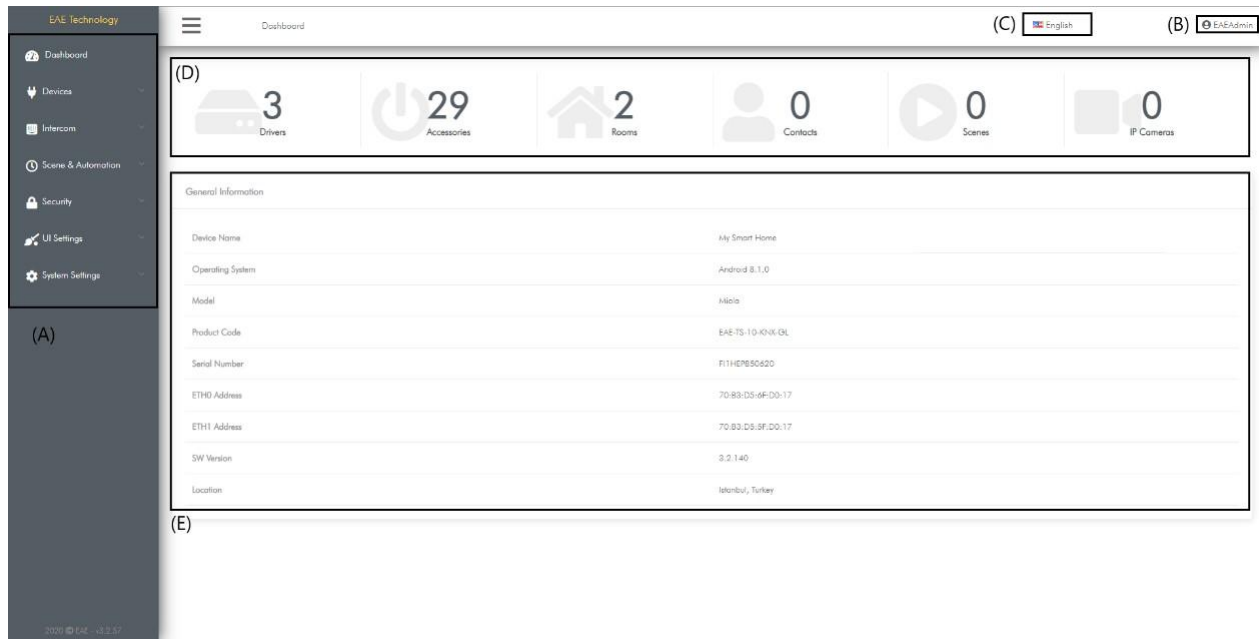

(A). Programming Interface Menu:

Menus related to configuration of all parameters of Touch Panel.

- Dashboard: The menu that shows general information about Touch Panel and summary of configured parameters.
- Devices: The menu that enables to configure accessories controlled by Touch Panel, their drivers and rooms.
- Intercom: The menu that enables to configure settings of intercom feature and intercom contacts.
- Scene & Automation: The menu that enables to configure scenes and automation rules.
- Security: The menu that enables to configure security system with connected sensors and IP Cameras.
- UI Settings: The menu that enables to configure objects in Touch Panel User Interface.
- System Settings: The menu that enables to configure general system settings of Touch Panel.

(B). Programming Interface Shortcuts :

In this menu, there are functions such as changing the username password of Programming Interface, restarting Touch Panel when necessary and exit Programming Interface.

(C). Language Options:

Here are the language options of the Programming Interface. Supported languages are English and Turkish.



Selected language is only available for Programming Interface. It does not change the language of Touch Panel User Interface.

(D). Dashboard – Summary Information:

Summary view shows number of added drivers, accessories, rooms, contacts in intercom, created scenes and IP Cameras in Touch Panel.

(E). Dashboard – General Information about Touch Panel:

Here are the general information about Touch Panel.

2. SYSTEM SETTINGS

2.1. INTRODUCTION

This section describes the configuration of settings required for installation, commissioning and maintenance of Miola Touch Panel. All settings described in this section can be found in System Settings menu. To access all of these settings, you must first be logged into Programming Interface. Submenus placed under System Settings are listed below:


- Import / export
- General
- Network
- RSS Settings
- Security

2.2. PROJECT IMPORT / EXPORT


2.2.1 EXPORT

You can backup configurations in Touch Panel and restore these in another Touch Panels. To do this:

- Go to System Settings > Import / Export
- Click Export

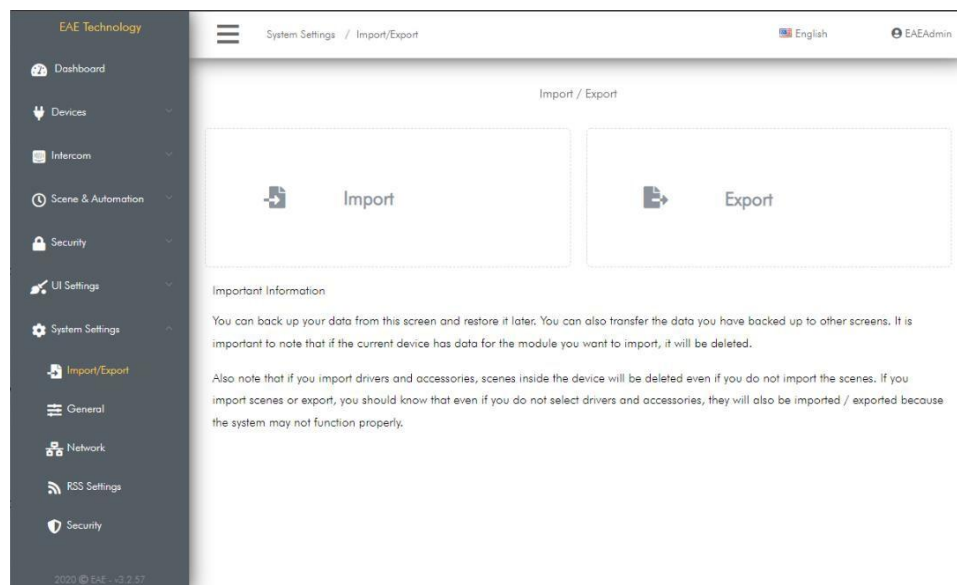

- Select modules to backup and click export in the pop-up window.

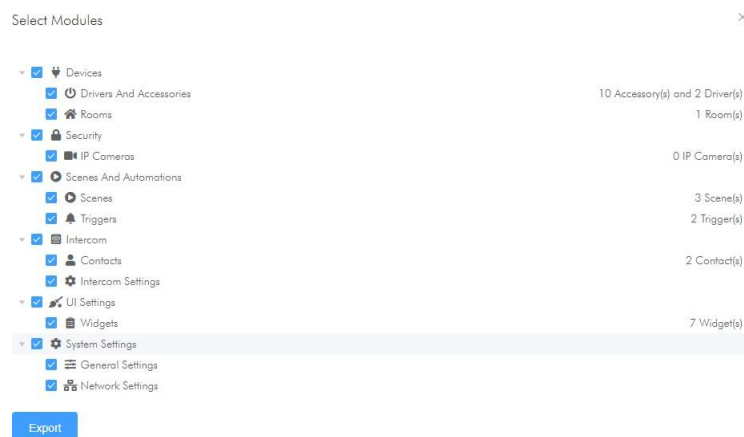


- Backup file is saved as backup.json in your computer.

2.2.2 IMPORT

You can restore backup configurations to Touch Panel. To do this:

- Go to System Settings > Import / Export
- Click Import

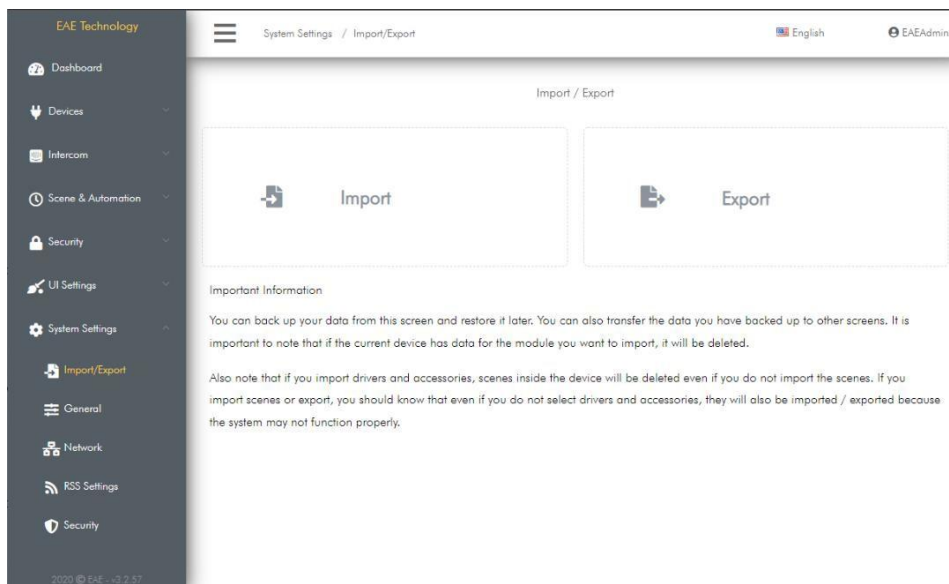

- Choose backup file and install in the pop-up window.



Previously configured module parameters will be deleted while restoring selected modules.



If Accessories and Drivers are exported, previously configured scenes will be deleted even scene configurations are not exported. This is because previously configured accessories and drivers will be deleted.




If scenes are imported/exported, accessories and drivers will be imported/exported to run scenes properly.

2.3. GENERAL

2.3.1. PROJECT SETTINGS

It is the section where information such as which block the Touch Panel is in, which floor, which flat it is in and the contact information of integrator commissioned the project are configured. Required information will be used to filter Touch Panels when the remote configuration feature is enabled. To do this:


- Go to System Settings > General > Project Settings
- Enter name of the project, block name, Floor number and Flat number.
- Enter the location of the Touch Panel.
-  Weather information of the related location is cached from weather servers and displayed in the dashboard of the Touch Panel user interface. Internet connection is required to do this.
- Enter the name and phone number of the integrator.
- Click save to apply changes.

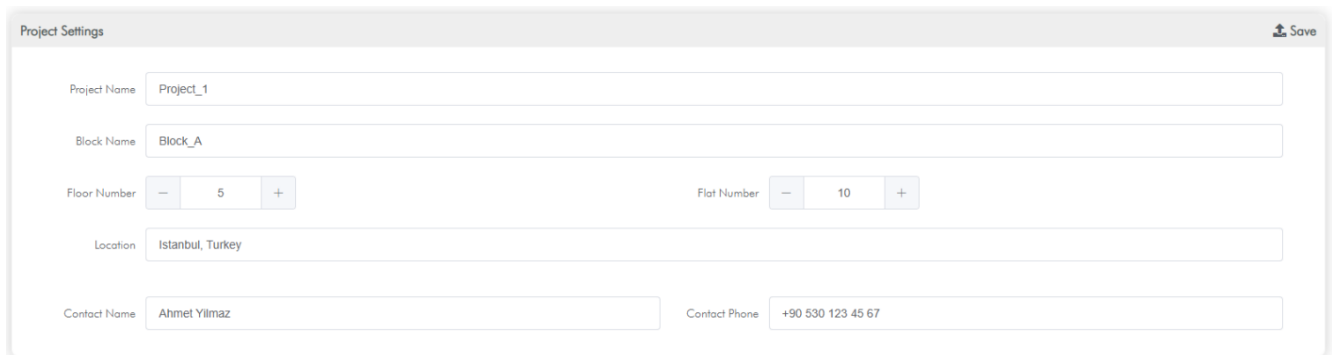

2.3.2. DEVICE SETTINGS

It is the section where information such as name of the Touch Panel, user interface language and background picture are configured. To do this:


- Go to System Settings > General > Device settings
- Enter the name of Touch Panel. Name can be considered as the name of smart home because Touch Panel is the controller of Miola Smart Home System.
- Choose the language of Touch Panel user interface.
- Click Select File and choose preferred background picture. You can blur the picture by clicking blur button. Background picture must be;
1280px X 800px for 10" Touch Panels and **600px X 1024px for 7" Touch Panels**.
- Click save to apply changes.

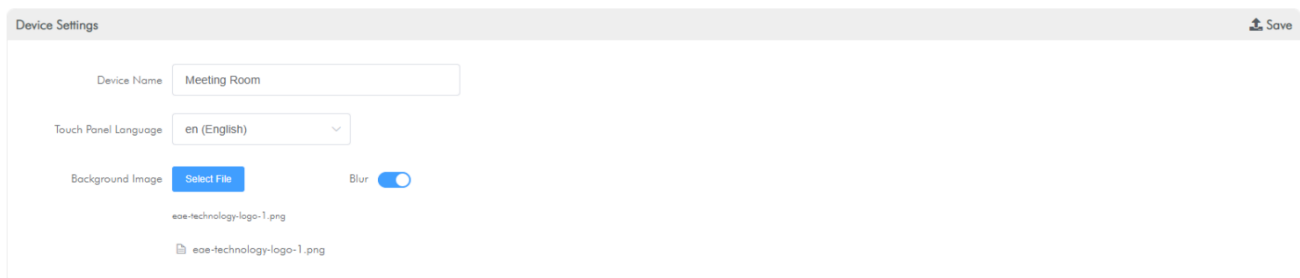

2.3.3. SCREENSAVER SETTINGS

It is the section where Touch Panel Screen Saver settings are configured. To do this:

- Go to System Settings > General > Screen Saver
- Choose Screen Saver Time. Time can be selected between 1 – 60 minutes.
- Click save to apply changes.

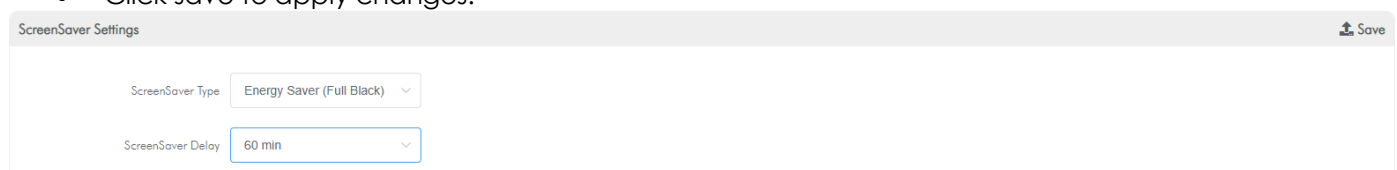

2.3.4. WEATHER SETTINGS

It is the section where whether settings are configured. To do this:

- Go to System Settings > General > Weather Settings
- Choose temperature unit.
- Choose polling period of weather information from Cloud Servers.
- Click save to apply changes.

2.3.5. DOORBELL & RINGTONE SETTINGS

It is the section where doorbell and ringtone settings are configured.

To do this:

- Go to System Settings > General > Doorbell & Ringtone Settings
- Click doorbell enable button to activate doorbell function.
- Choose doorbell trigger type
 - System I/O Input
 - KNX
- Enter requested parameters according to doorbell trigger type.
- Choose doorbell ringtone.
- Choose doorbell ringtone repeat count.
- Turn on Camera Preview if you want to view selected camera when doorbell is triggered.
- Choose camera to be displayed. Note: To do this, camera must be added to Touch Panel from menu Security > IP Cameras.
- Enter the sequence of camera display when doorbell is triggered.
- Choose intercom ringtone from the list. This ringtone will play when intercom call is received.
- Click save to apply changes.

2.3.6. DATE & TIME SETTINGS

 
It is the section where time settings are configured. To do this:

- Go to System Settings > General > Date&Time Settings
- Choose time zone(GMT)
- Click save to apply changes.

2.3.7. KNX SETTINGS

It is the section where physical address of Touch Panel in KNX Bus is configured. To do this:

- Go to System Settings > General > KNX Settings
- Enter KNX Source Address of Touch Panel.
- Click save to apply changes.



KNX Settings

Source Address 15.15.250

2.4. NETWORK SETTINGS


-  Touch Panels with dual Ethernet Interfaces (ETH0, ETH1) can be connected to 2 different LAN at the same time. Thanks to this feature, home and building network can be isolated from each other in multi flat residential buildings.
-  While ETH0 can be configured as Static and DHCP IP configuration, ETH1 is only configured as DHCP configuration.
-  Both Ethernet Interfaces have ability to connect to internet. That's why, when both interfaces are connected to local networks, it should be specified through which local network the Touch Panel should be connected to internet.
-  If Both Ethernet interfaces are used, it is recommended to configure ETH0 and ETH1 IP addresses in different IP blocks

In this section, you can determine which Ethernet interface the Touch Panel should connect to internet. To do this:

- Go to System Settings > Network
- Select which Ethernet interface you want the Touch Panel to connect to internet. Make sure that there is an internet connection in the network that your preferred interface is connected to.
-  If there is an internet connection in both networks, internet connection will be provided from the interface you prefer.
- Click save to apply changes.

It is the section where ETH0 Ethernet network interface settings are configured. To do this:

- Go to System Settings > Network
- Choose IP Client mode (Static, DHCP)
- Enter requested parameters in case you choose Static IP.
- Click save to apply changes.

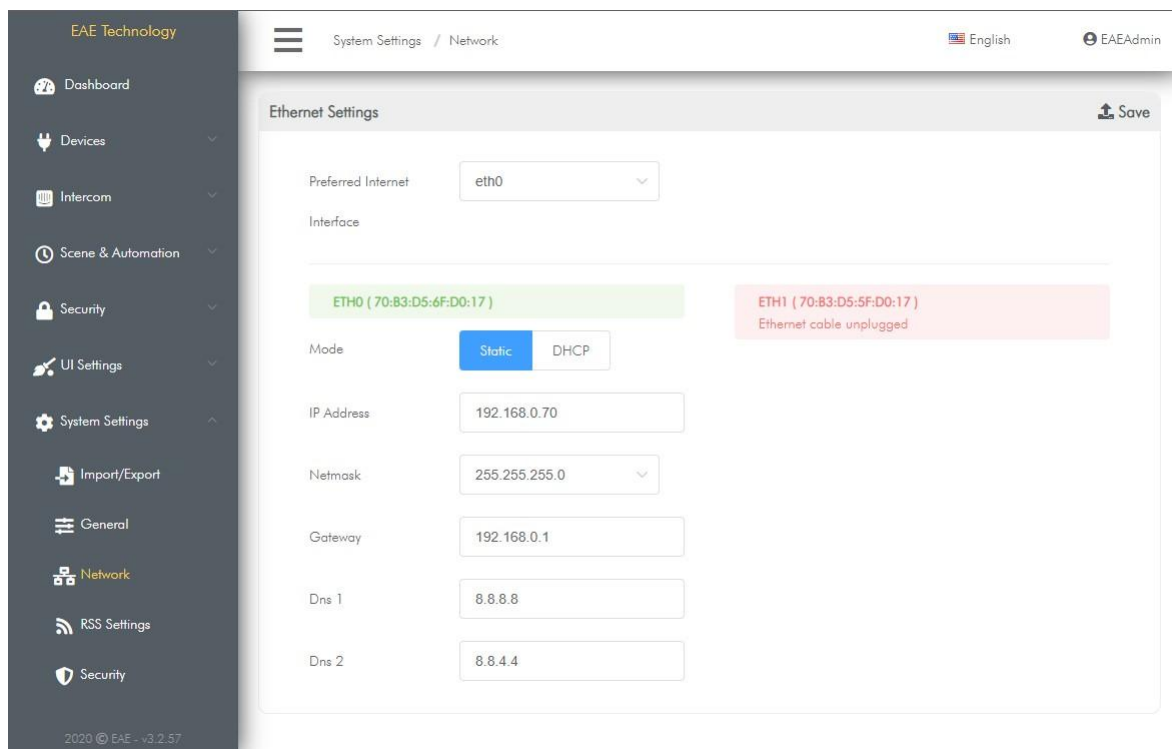

2.5. RSS SETTINGS

It is the section where RSS Feeds settings are configured. Supported RSS headlines:

- News
- Business
- Technology
- Sports
- Economy

When the RSS feeds under these headlines are checked, they will be displayed on the RSS Widget in the dashboard of Touch Panel user interface.

To configure RSS Feed polling period:

- Go to System Settings > RSS Settings
- Enter a value to polling period.
- Click save to apply changes.


To add an RSS feed other than standard RSS feeds:

- Go to System Settings > RSS Settings
- Enter the title of RSS feed.
- Enter the URL of RSS Feed
- Click Add button
- Click save to apply changes.

2.6. SECURITY SETTINGS

This is the section where Security System Password and Integrator Password of Touch Panel are configured. To do this:

- Go to System Settings > Security Settings
- Enter Arm/Disarm password of Security System. You must first activate password on Touch Panel UI. (See [Security Panel Settings > Settings to be made on Touch Panel UI](#))
- Enter Panel Integrator Password. Default password is **1234**
- Click save to apply changes.

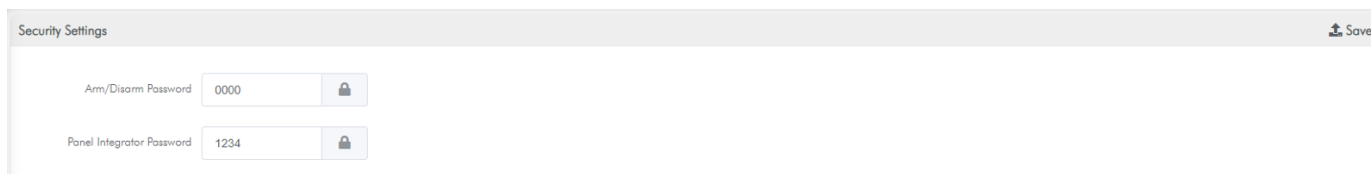

The screenshot shows a 'Security Settings' window with a 'Save' button in the top right corner. It contains two password input fields, each with a lock icon to its right. The first field is labeled 'Arm/Disarm Password' and contains the value '0000'. The second field is labeled 'Panel Integrator Password' and contains the value '1234'.

Field Label	Current Value
Arm/Disarm Password	0000
Panel Integrator Password	1234

3. UI SETTINGS

3.1. INTRODUCTION


Configurations of the Touch Panel user interface are made in this section. You can customize the interface by adjusting visual settings for the widgets and menus on the dashboard.

3.2. WIDGETS

Widgets are useful sections of the Touch Panel user interface that appear on the dashboard. Thanks to these widgets, user can directly access favorite devices, rooms, scenes, intercom shortcuts, intercom favorite contacts, security panel and RSS feeds on the dashboard.

Available Widgets:

- Favorite Devices
- Favorite Scenes
- Favorite Rooms
- Security Panel
- Intercom Shortcuts
- Intercom Favorite Contacts

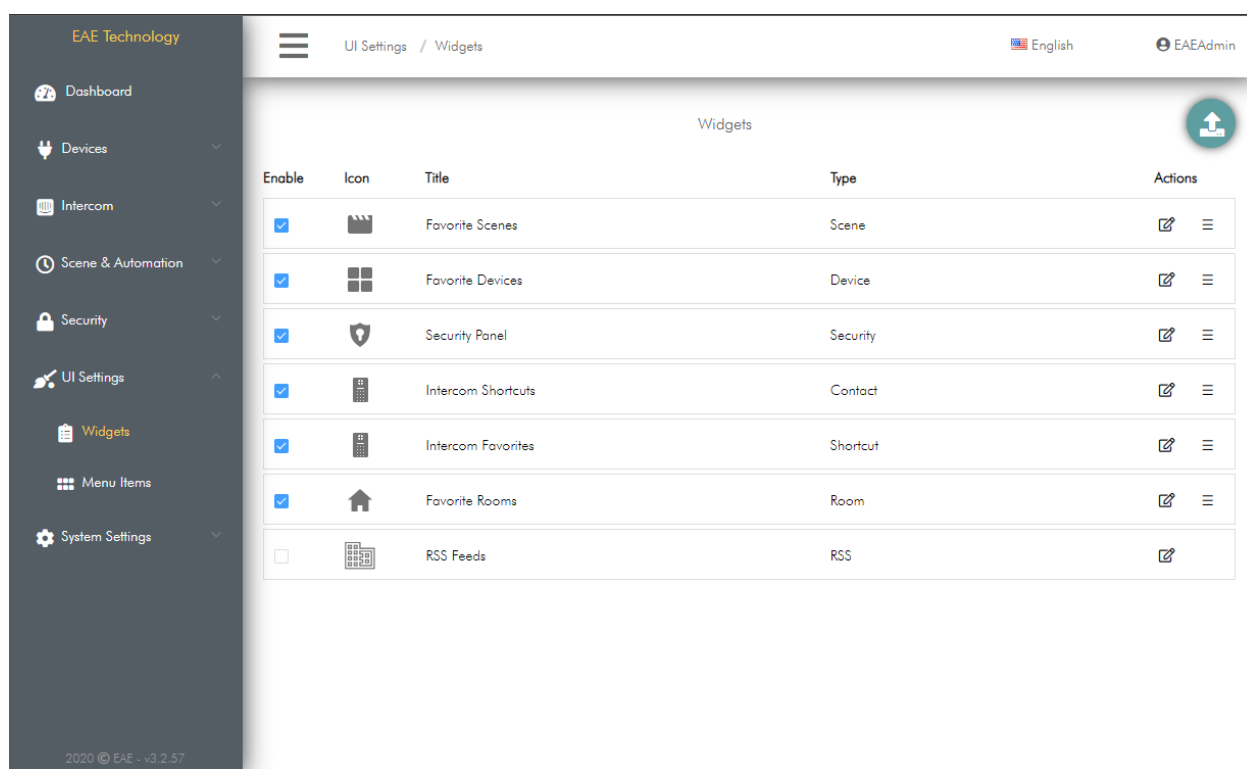


3.2.1. ENABLING WIDGETS

- Go to UI Settings > Widgets
- Click the box in the Enable column which widgets you want to display on the dashboard.
- Click button to save changes.

3.2.2. ARRANGING WIDGET ORDER

- Go to UI Settings > Widgets
- Change the order with drag and drop after click and hold  button in the Actions column.
- Click  button to save changes

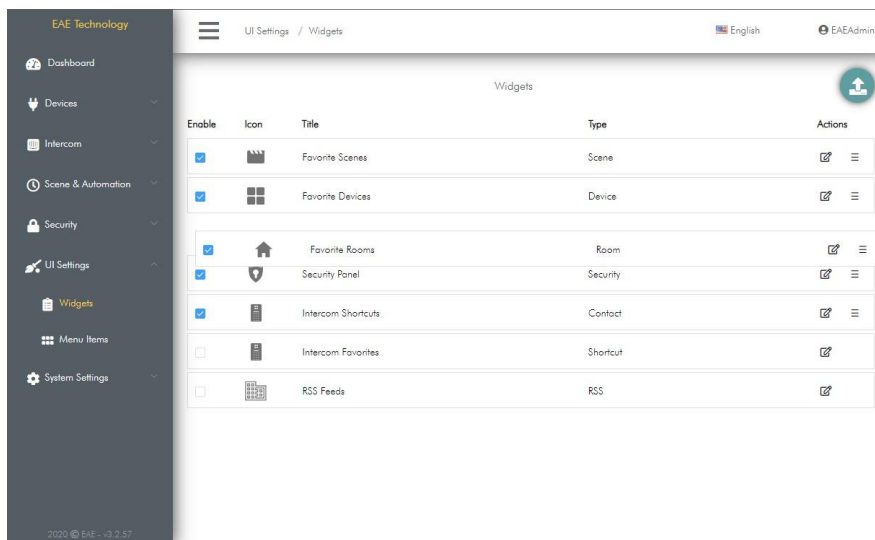

3.2.3. EDITING WIDGETS

- Go to UI Settings > Widgets
- Click  button to change the title and icon of the widgets
- Change the title and icon of the widget in the pop-up window and confirm.
- Click  button to save changes

Update Widget

Icon

Icon 9

★

* Widget Title


Favorite Accessories

Cancel

Confirm

3.3. MENU ITEMS

Menus are the items displayed on the dashboard of Touch Panel user interface. From these menus, Devices, intercom system, security panel, scenes, automation recipes and concierge system can be accessed. Unused menus can be removed from dashboard.

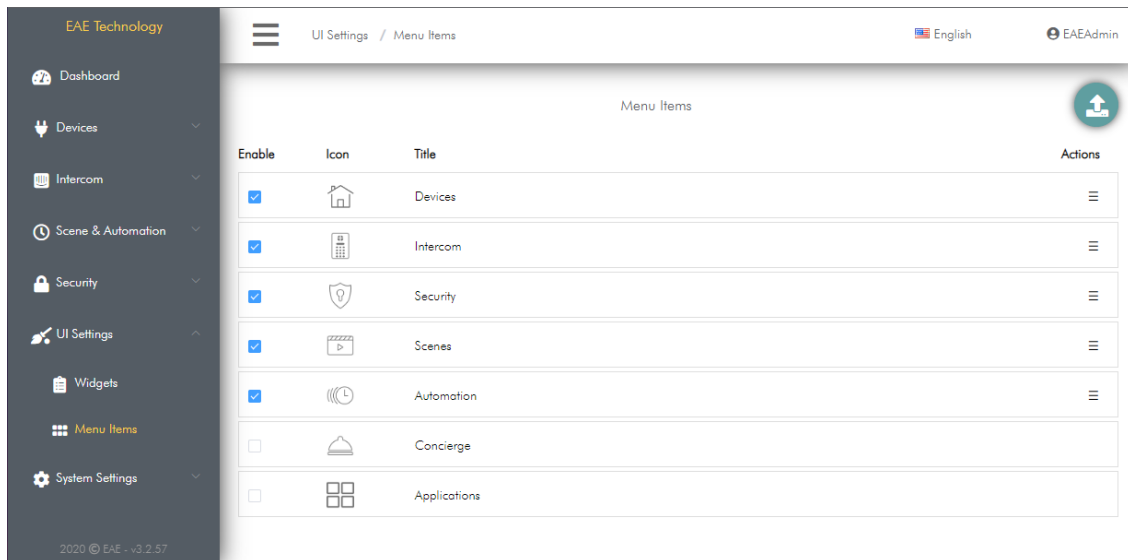


3.3.1. ENABLING MENUS

- Go to UI Settings > Menu Items
- Click the box in the Enable column which menus you want to display on the dashboard.
- Click button to save changes

3.3.2. ARRANGING MENU ORDER

- Go to UI Settings > Menu Items
- Change the order with drag and drop after click and hold button in the Actions column.
- Click button to save changes

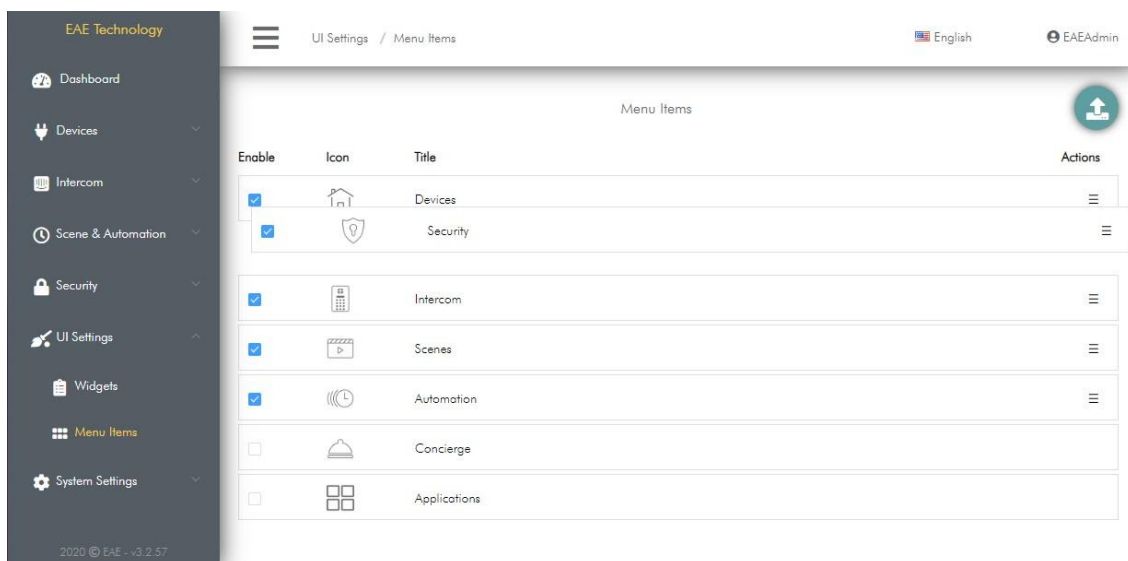

4. DRIVERS

4.1. INTRODUCTION

Drivers are the automation interfaces to which accessories will be connected. Miola 3.3. operating system offers possibility to connect with many different automation interfaces. This provides the opportunity to control accessories connected to more than one automation interface on the same Touch Panel at the same time in the same user interface.

Available Drivers:

- KNX Twisted Pair
- KNXnet/IP
- System I/O





In order to add a new accessory to the Touch Panel, it is necessary to add the driver to which that accessory will be connected first.

4.2. ADDING NEW DRIVER

In this section, a new driver is added to Touch Panel. To do this:


- Go to Devices > Drivers
- Click button
- Choose the driver that you want to add.
- Enter required information related to driver and click Add button.

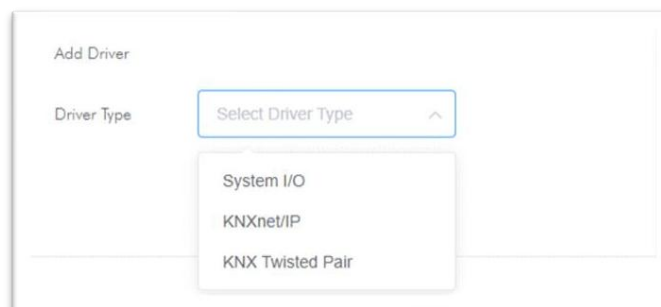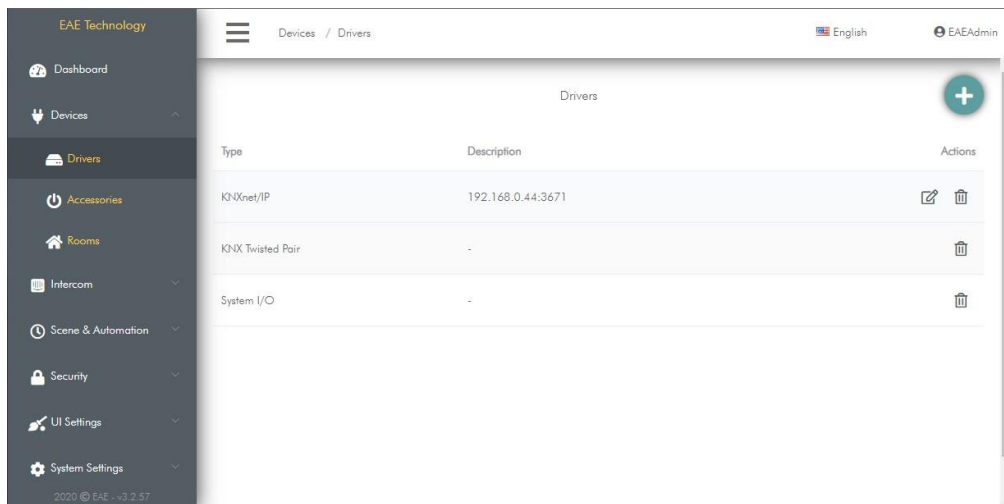

4.3. EDITING DRIVERS

You can edit previously added driver's information in this section. To do this:

- Go to Devices > Drivers
- Click  button of the driver you want to edit.
- You can edit information about driver in page.

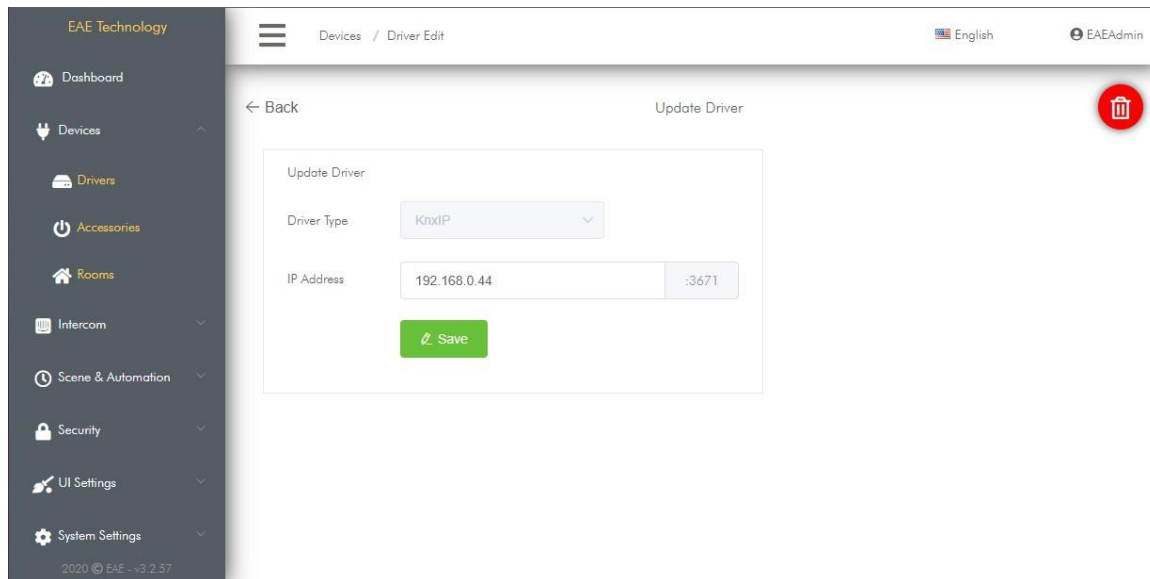

4.4. DELETING DRIVER

You can delete previously added driver in this section. To do this:

- Go to Devices > Drivers
- Click  button of the driver you want to delete.
- Driver will be deleted after confirming delete process in the confirmation box.



When a driver is deleted, all accessories related to this driver will be deleted.


5. ROOMS & SECTIONS

5.1. INTRODUCTION

Rooms & Sections is where smart home accessories will be displayed in Touch Panel user interface. Creating room and section with names in accordance with the physical rooms in the building/house will be beneficial for the user experience. You can give names and also icons to rooms.



There is always a default room in Touch Panel for convenience in adding accessories, deleting rooms and so on. This room cannot be deleted, but its name and icon can be changed.

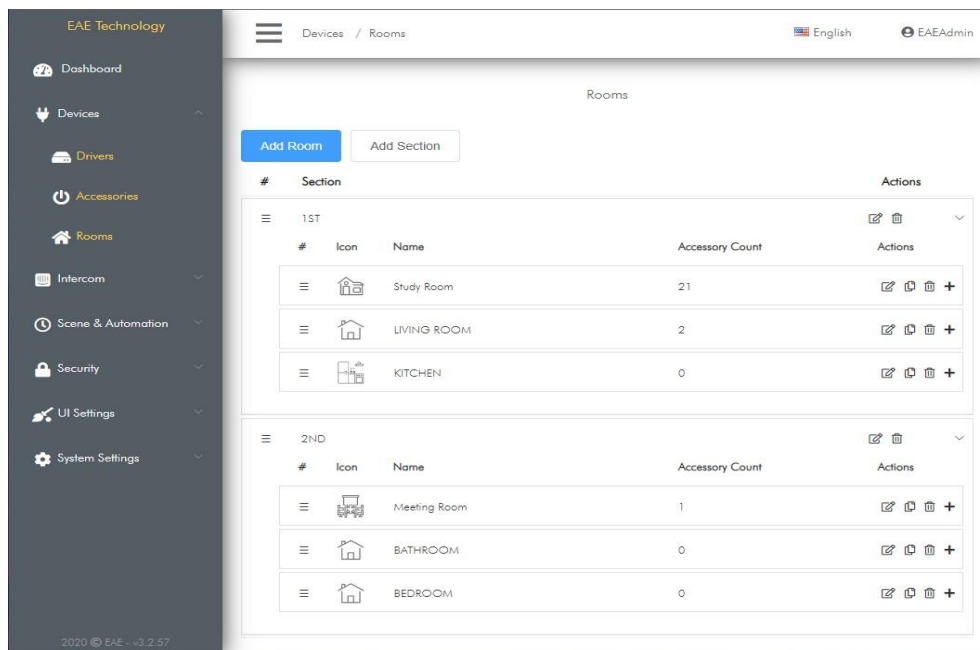

5.2. ADDING NEW SECTION

You can add sections belong to project and displayed in Touch Panel user interface. To do this:

- Go to Devices > Rooms
- Click Add Section button.
- Enter the name of the section in the pop-up window.
- Click Confirm and Save changes.

5.3. ADDING NEW ROOM

You can add sections belong to project and displayed in Touch Panel user interface. To do this:

- Go to Devices > Rooms
- Click Add Room button.
- Enter the name, icon and section of the room in the pop-up window.
- Click Confirm and Save changes.

5.4. EDITING ROOMS

You can edit previously added room from Touch Panel user interface. To do this:

- Go to Devices > Rooms
- Click  button of the room you want to edit.
- You can edit information about room in page.

5.5. ARRANGING ROOM OR SECTION ORDER

The rooms you have added are displayed in the rooms list on the Touch Panel user interface. You can change the view order of any room in this section. For this:

- Go to Devices > Rooms
- You can change order of a room by drag and drop of  button placed in # column of the room.
- You will see confirmation notification after process is completed.

#	Section	Icon	Name	Accessory Count	Actions
1	1ST		LIVING ROOM	2	  
2	1ST		Study Room	21	  
3	1ST		KITCHEN	0	  

#	Section	Icon	Name	Accessory Count	Actions
1	2ND		Meeting Room	1	  
2	1ST		LIVING ROOM	2	  
3	1ST		Study Room	21	  
4	1ST		KITCHEN	0	  

5.6. DELETING ROOMS

You can delete previously added room from Touch Panel user interface. To do this:


- Go to Devices > Rooms
- Click  button that of the room that you want to delete
- Click Confirm and Save changes.

 When a room is deleted, the accessories related to this room are not deleted and transferred to default room so these can be reconfigured later.

5.7. COPY ROOMS

You can copy a room you have added before, along with the devices in it. To do this:

- Go to Devices > Rooms
- Click  button of the room that you want to copy.
- New copied room is added to Touch Panel, after entering its name and confirming changes.

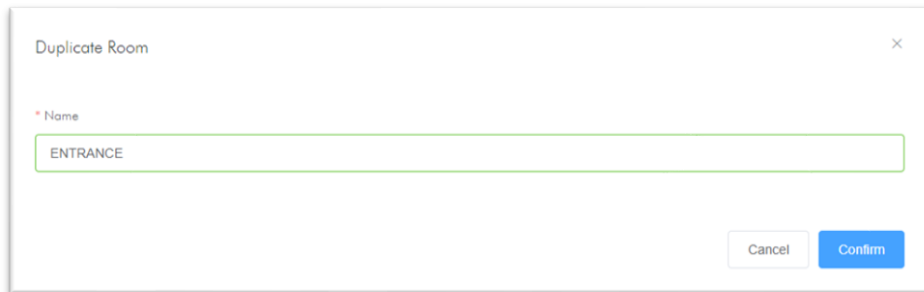

By copying a room with accessories added in it, you can copy all the accessories in it at once.

5.8. ADDING ACCESSORY IN ROOM SETTINGS

You can add an accessory to previously added room. To do this:

- Go to Devices > Rooms.
- Click  button in the operations column of the room you want to add accessory to
- Here you will be redirected to Add New Accessory wizard. After entering necessary information, new accessory will be added to room.



Adding accessory from room, can be thought of as a shortcut to the Add New Accessory wizard.

6. ACCESSORIES


6.1. INTRODUCTION

In order to control devices connected to automation interfaces of Touch Panel, it must be added as an accessory in the Programming Interface. Miola 3.3 operating system allows to control many different types of accessories related to different automation interfaces simultaneously on a single platform. In this way, the user experiences smooth smart home control experience.

6.2. ADDING NEW ACCESSORY

You can add many different types of accessories for the control of smart devices on Touch Panel. To do this:

- Go to Devices > Accessories
- Click  button

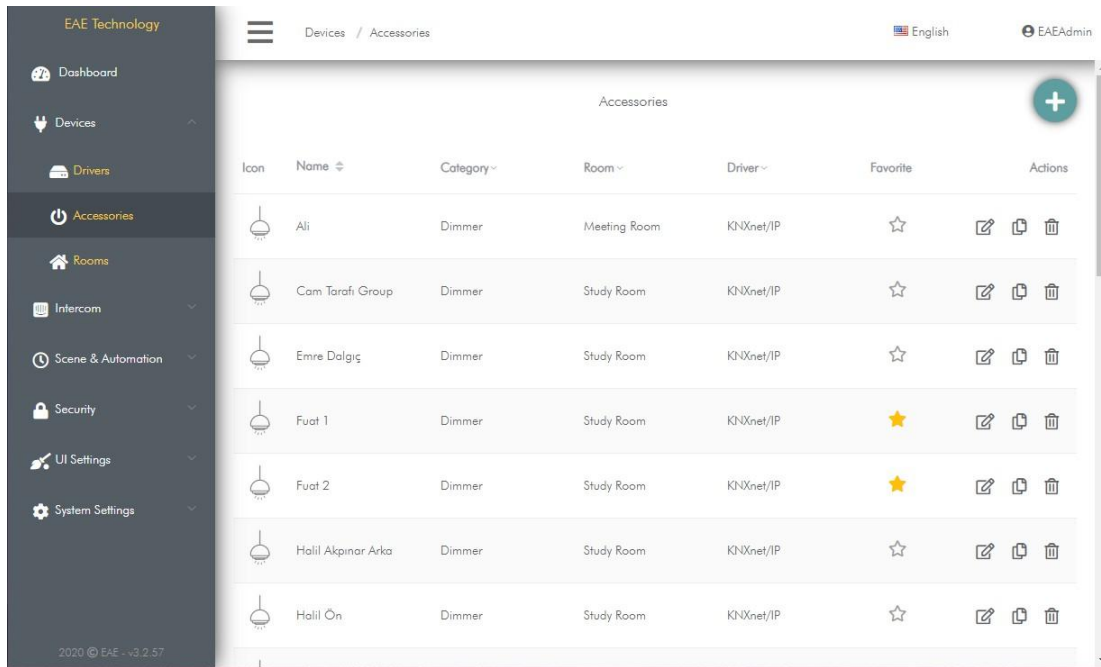

- Add New Accessory wizard will appear. All accessories are easily added with information entered in this wizard in 3 steps.



The information to be entered varies according to the type of driver and accessory. Accessory based detailed information are explained in Supported Device Types section.

- In the first step, enter information such as the name of the accessory, room, the driver it is connected to, whether it is a favorite device and whether the device will appear in the user interface or not.

The screenshot displays the 'Add Accessory' configuration screen in the EAE Technology web interface. The left sidebar contains navigation links for Dashboard, Devices, Drivers, Accessories, Rooms, Intercom, Scene & Automation, Security, UI Settings, and System Settings. The main content area shows a three-step wizard. Step 1, 'Enter device name, room and driver', is active. It features a progress bar at the top with three steps: Step 1 (selected), Step 2 (Select category), and Step 3 (Configure device details). Below the progress bar, there are navigation links for '<< Back' and 'Next >>'. The form fields are as follows: 'Accessory Name' is a text input with 'Shutter' entered and a green checkmark; 'Room' is a dropdown menu with 'LIVING ROOM' selected; 'Driver' is a dropdown menu with 'KNXnet/IP' selected and a green checkmark; 'Favorite' is a toggle switch currently turned off; and 'Visible' is a toggle switch currently turned on. The footer of the sidebar indicates '2020 © EAE - v3.2.57'.

 You can display the accessories that user will use frequently on the dashboard of Touch Panel user interface. For this, mark accessory as favorite. Then enable Favorite Devices Widget. This will allow you to display favorite accessory in the Favorite Devices Widget in the dashboard.

 In some cases, you may want the accessory you added to be invisible in the user interface. In particular, you can mark as invisible the devices that you do not want the user's intervention to be controlled by scenes of automation triggers.

 Before adding an accessory, it is necessary to add the driver and room it is connected to.

- In the second step, select the type of the accessory and its icon. For some accessory types, the category to be displayed in the user interface is also selected.

The screenshot displays the 'Add Accessory' configuration screen in the EAE Technology system. The interface is divided into a sidebar on the left and a main content area. The sidebar contains navigation links for various system components. The main content area shows a progress bar with three steps: Step 1 (completed), Step 2 (current), and Step 3. In Step 2, the 'Accessory Type' is selected as 'Shutter' and the 'Icon' is selected as 'Icon 12'. The interface also includes a 'Back' button and a 'Next' button for navigation.



Accessory types vary by driver.

- In the third step, you need to enter the necessary variables of the accessory according to the selected driver and accessory type.

The screenshot displays the EAE Technology web interface for configuring an accessory. The interface is in English and shows a three-step process: Step 1 (Enter device name, room and driver), Step 2 (Select category), and Step 3 (Configure device details). The current step is Step 3. The page has a sidebar with navigation options: Dashboard, Devices, Drivers, Accessories, Rooms, Intercom, Scene & Automation, Security, UI Settings, and System Settings. The main content area shows configuration fields for 'Move (1 bit)', 'Stop (1 bit)', 'Level Percentage (1 Byte)', and 'Slat Level (1 Byte)'. Each section has a 'Write' field and a 'Read' field. The 'Level Percentage' section also has a 'Level Type' dropdown menu set to 'Open: 0% - Closed: 100%'. A 'Save' button is located at the top right of the configuration area.

- After entering the variables, you will complete adding an accessory by clicking the save button.

6.3. EDITING ACCESSORIES

In this section, you can edit information of the accessory you previously added. To do this:

- Go to Devices > Accessories
- Click  button of the accessory you want to edit in the operations column.
- You can edit information of accessory on the open page.

6.4. DELETING ACCESSORIES

You can delete an accessory you have added from the Programming Interface. To do this:

- Go to Devices > Accessories
- Click  button of the accessory you want to delete in the operations column.
- Click Confirm and Save changes.

6.5. COPY ACCESSORIES

You can copy an accessory you have added before, along with the information in it. To do this:

- Go to Devices > Accessories
- Click  button of the accessory that you want to copy.
- New copied accessory is added to Touch Panel, after entering its name and confirming changes.



Copy an accessory will help you quickly add accessories, especially on devices connected to KNX Systems.



In order to control another load with copied accessory, you need to update group address and other related information. To do this, update information of copied accessory by clicking edit button.

7. SUPPORTED ACCESSORY TYPES

7.1. KNX DRIVERS

Miola 3.3 operating system provides new types of accessories to control and display many different types of data and devices in KNNX Systems. Many functions available in different accessory types can be customized to support different Data Types (Data points) in KNX System. In this way, many products from different brands can be controlled and monitored by Miola 3.3. Touch Panels.

Supported Accessory Types with KNX Drivers:

- Switch
- Dimmer
- Shutter
- Advanced Thermostat
- Thermostat/Air Conditioner
- Punch Button
- Binary Button
- Motion Sensor
- Door Sensor
- Window Sensor
- Leak Sensor
- Gas Sensor
- Smoke Sensor
- Status Display




KNX Twisted Pair and KNXNet IP drivers support same accessory types.


7.1.1. SWITCH

Switch Accessory Type allows to control and monitor On/Off Loads in KNX Systems.

MIOLA TOUCH PANEL UI VIEW

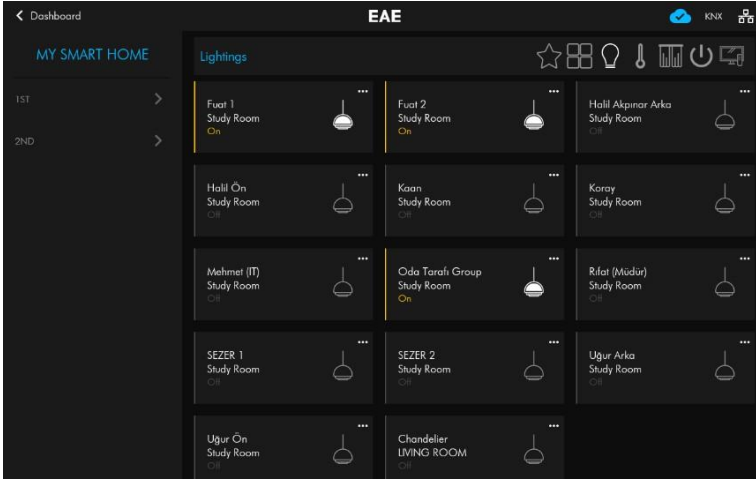

In the summary view of Switch, the status of the device is displayed. You can change status by tapping a device. In order to view detailed information tap three dots icon in the upper right corner of the Switch accessory.

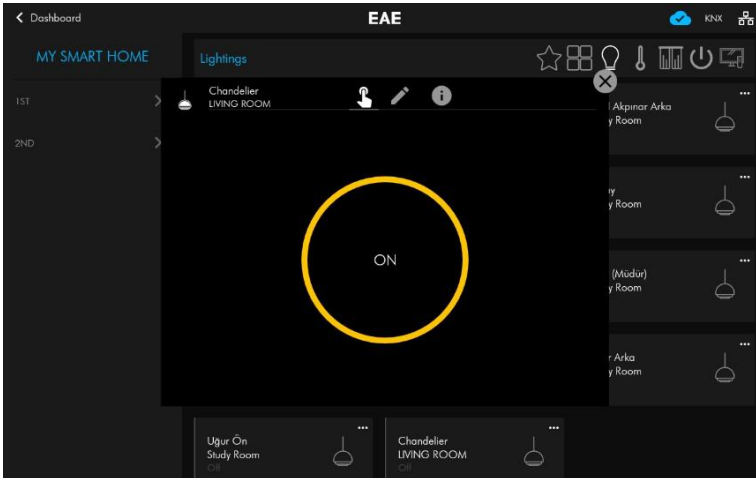

You can find detailed view of Switch Accessory in the left hand side.


AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
Switch	1.001 (1 Bit)	Read, Write

ADDING A NEW SWITCH ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – Switch Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as Switch.
- Choose in which category you want the accessory to be displayed in user interface. (Lights, Shutters, Climate, Generic)
- In third step, enter required information related to Switch accessory.
- Click save to apply changes.

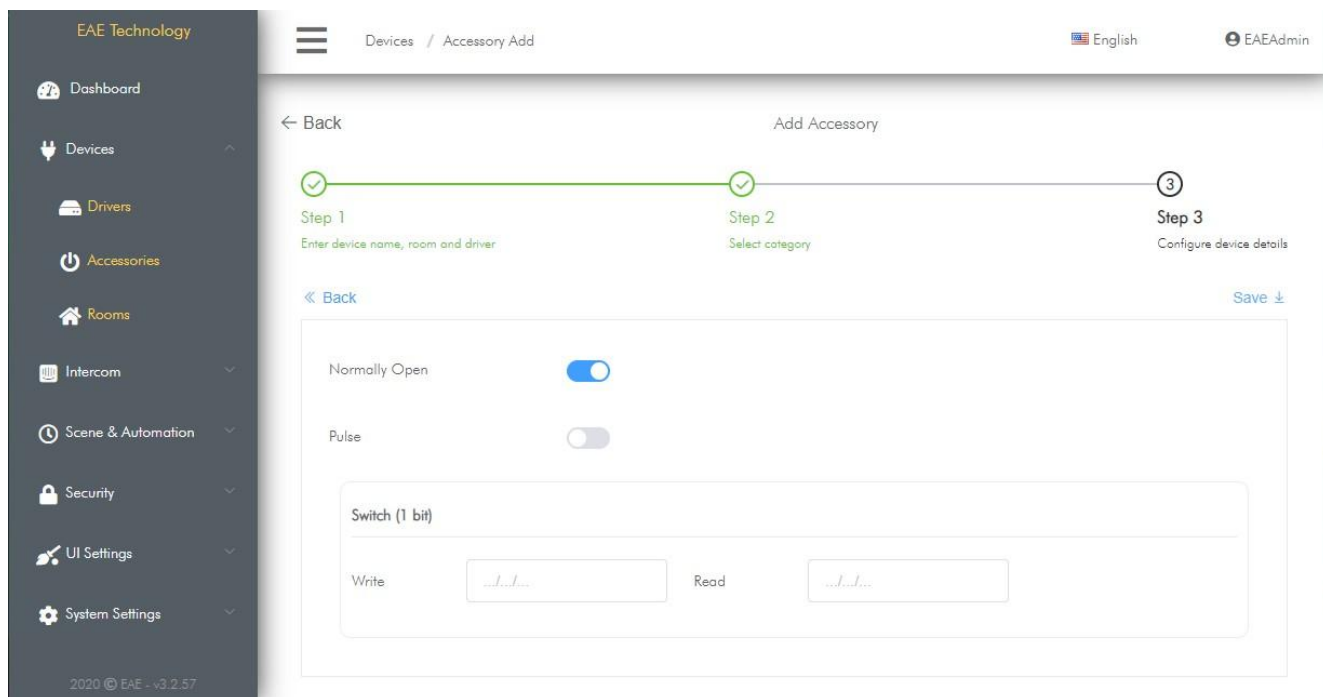

PARAMETERS

Normally Open: Type of relay to which the controlled load is connected
 Pulse: The duration that the controlled load stays open and then closes

FUNCTIONS

Switch:

It is the function that enables the connected load to be switched on or off. When reading and writing data, it uses the 1-Bit 1.001 data type.


Related Group Addresses:

Switch (1-Bit) Write: Data write group address to which On/Off command is sent
 Switch (1-Bit) Read: Data read group address where On/Off status is monitored


7.1.2. DIMMER

Dimmer Accessory allows to control and monitor dimmable devices in KNX Systems by Miola Touch Panels. On/Off Control and status, brightness control and status information are controlled and monitored by this accessory type.

MIOLA TOUCH PANEL UI VIEW

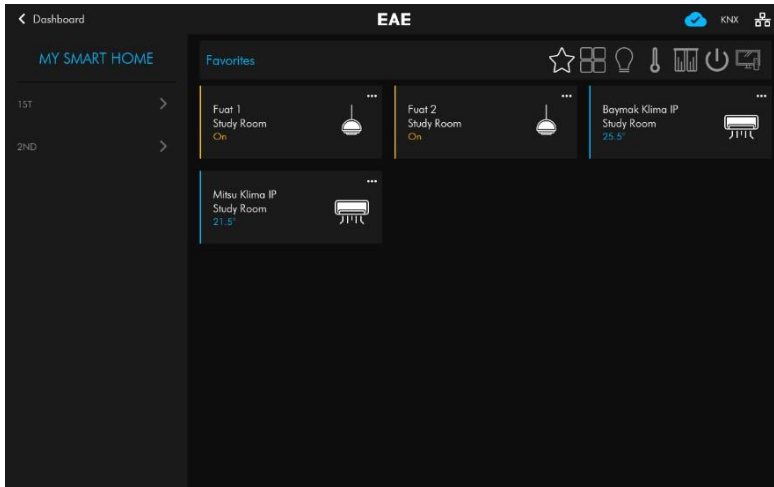

In summary view On/Off status of device is monitored. Just tap device to reach detailed view.

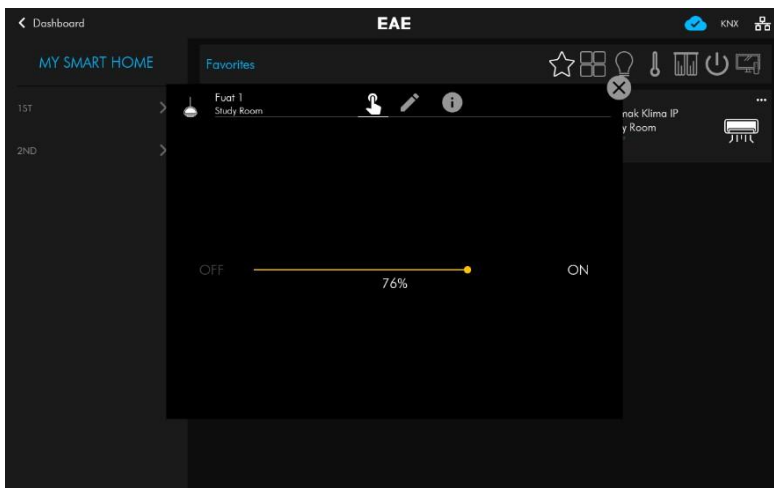

You can find detailed view of Dimmer Accessory in the left hand side.

AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
Switch	1.001 (1 Bit)	Write, Read
Dimming Value	5.001 (1Byte)	Write, Read

ADDING A NEW DIMMER ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – Dimmer Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as Dimmer.
- In third step, enter required information and configure functions related to dimmer accessory.
- Click save to apply changes.

FUNCTIONS

Switch:

It is the function that enables the connected load to be switched on or off. When reading and writing data, it uses the 1-Bit 1.001 data point.

Related Group Addresses:

Switch (1-Bit) Write: Data write group address to which On/Off command is sent
 Switch (1-Bit) Read: Data read group address where On/Off status is monitored

Dimming Value:

It is the function that allows controlling and monitoring brightness value of the connected device. It uses 5.001 1 Byte Data Type when reading and writing data.


Related Group Addresses:

Dimming Value (1-Byte) Write: Data write group address to which brightness value of load is sent
 Dimming Value (1-Byte) Read: Data read group address where brightness value of load is monitored


7.1.3. SHUTTER

Shutter Accessory allows to control and monitor roller shutters and blinds in KNX Systems by Miola Touch Panels. Open/Close control and status, Position control and status and also slat control and status information are controlled and monitored by this device type.

MIOLA TOUCH PANEL UI VIEW

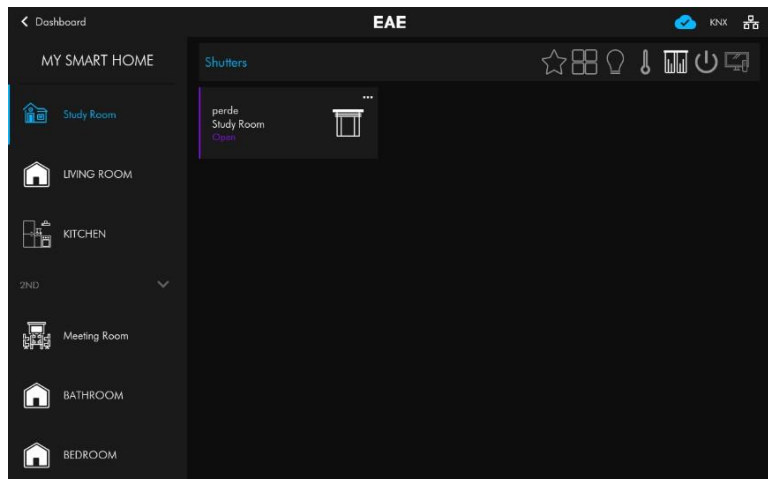

In summary view, Open/Close status of shutter is monitored. Just tap device to reach detailed view.

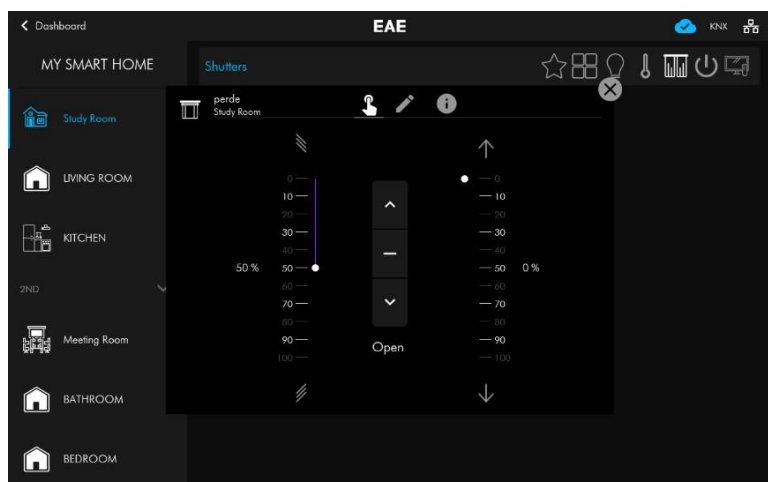

You can find detailed view of Shutter Accessory in the left hand side.

AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
Move	1.008 (1 Bit)	Write
Stop	1.007 (1 Bit)	Write
Level Percentage	5.001 (1 Byte)	Write, Read
Slat Level	5.001 (1Byte)	Write, Read

ADDING A NEW SHUTTER ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – Shutter Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as Shutter.
- In third step, enter required information and configure functions related to shutter accessory.
- Click save to apply changes.

FUNCTIONS

Move:

It is the function that enables the connected shutter to open or close. It uses 1.008 1-Bit Data Type when writing data.

Related Group Addresses:

Move (1-Bit) Write: Data write group address to which Open/Close command is sent.

Stop:

It is the function that enables the connected shutter to stop. It uses 1.007 1-Bit Data Type when writing data.

Related Group Addresses:

Stop (1-Bit) Write: Data write group address to which Stop command is sent.

Level Percentage:

It is the function that allows shutter to be opened in a certain position. When reading and writing data, it uses 5.001 1-Byte Data Type.

Related Group Addresses:

Percentage Value (1-Byte) Write:	Data write group address to which the command to open the shutter at a certain position is sent
----------------------------------	---

Percentage Value (1-Byte) Read: Data read group address where the current position of shutter is monitored

Slat Level :

It is the function that the slot position adjustments of the blinds are made. When reading and writing data, it uses 5.001 1-Byte Data Type.

Related Group Addresses:

Percentage Value (1-Byte) Write: Data write group address to which the command to open slot is sent

Percentage Value (1-Byte) Read: Data read group address where the current position of slot is monitored

EAE Technology

Dashboard

Devices

Drivers

Accessories

Rooms

Intercom

Scene & Automation

Security

UI Settings

System Settings

Devices / Accessory Add

EnglishEAEAdmin

Step 1

Enter device name, room and driver

Step 2

Select category

Step 3

Configure device details

< Back

Save >

Move (1 bit)

Write

...

Stop (1 bit)

Write

...

☒ Level Percentage (1 Byte)

Write

...

Read

...

Level Type

Open: 0% - Closed: 100%

☒ Slat Level (1 Byte)

Write

...

Read


...

2020 © EAE - v3.2.5/7


7.1.4. ADVANCED THERMOSTAT

Advanced thermostat accessory type allows to control and monitor thermostats in KNX System by Miola Touch Panels. Temperature, fan speed, operation mode and control mode information are controlled and monitored by this device type.

MIOLA TOUCH PANEL UI

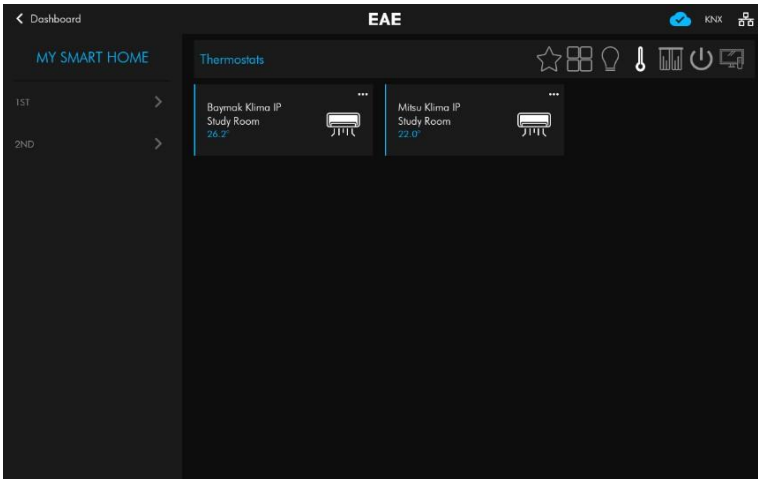

In summary view, operation mode and room temperature of thermostat is monitored. Just tap device to reach detailed view.

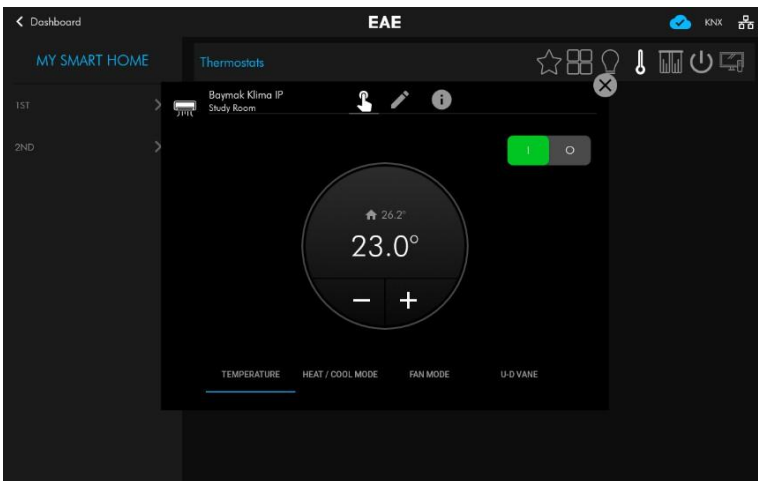

You can find detailed view of Thermostat Accessory in the left hand side.

AVAILABLE FUNCTION GROUPS

Since many functions are supported in the advanced thermostat accessory, these functions are grouped in the Touch Panel user interface. The names of the group can be changed and unused groups can be removed from the interface.

- Temperature function group
- Operation Mode function group
- Control Mode function group
- Fan Mode function group
- U-D Vane Function group
- L-R Vane function group

i Temperature function group is non-removable function group in Advanced Thermostat Device Type.


AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
On State	Multiple choice	Write, Read
Off State	Multiple choice	Write, Read
Room Temperature	Multiple choice	Read
Target Setpoint – Direct	Multiple choice	Write, Read
Target Setpoint – Shift 1 Byte	Multiple choice	Shift Write, Shift Read
Target Setpoint – Shift 2 Byte	Multiple choice	Shift Write, shift Read
Operation mode - Auto	Multiple choice	Write, Read
Operation mode - Heat	Multiple choice	Write, Read
Operation mode - Cool	Multiple choice	Write, Read
Operation mode - Fan	Multiple choice	Write, Read
Operation mode - Dry	Multiple choice	Write, Read
Control mode - Auto	Multiple choice	Write, Read
Control mode - Comfort	Multiple choice	Write, Read
Control mode - Standby	Multiple choice	Write, Read
Control mode - Night	Multiple choice	Write, Read
Control mode - Protection	Multiple choice	Write, Read
Fan mode – Auto	Multiple choice	Write, Read
Fan mode – Lowest	Multiple choice	Write, Read
Fan mode – Lower	Multiple choice	Write, Read
Fan mode – Middle	Multiple choice	Write, Read
Fan mode – Higher	Multiple choice	Write, Read
Fan mode – Highest	Multiple choice	Write, Read
U-D Vane - Auto	Multiple choice	Write, Read
U-D Vane – Position 1	Multiple choice	Write, Read
U-D Vane – Position 2	Multiple choice	Write, Read
U-D Vane – Position 3	Multiple choice	Write, Read
U-D Vane – Position 4	Multiple choice	Write, Read
U-D Vane – Position 5	Multiple choice	Write, Read
U-D Vane – Swing	Multiple choice	Write, Read
L-R Vane - Auto	Multiple choice	Write, Read
L-R Vane – Position 1	Multiple choice	Write, Read
L-R Vane – Position 2	Multiple choice	Write, Read
L-R Vane – Position 3	Multiple choice	Write, Read
L-R Vane – Position 4	Multiple choice	Write, Read
L-R Vane – Position 5	Multiple choice	Write, Read
L-R Vane – Swing	Multiple choice	Write, Read


ADDING A NEW ADVANCED THERMOSTAT

Follow the steps in Adding New Accessory section, to add new KNX – Advanced Thermostat Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as Advanced Thermostat.
- In third step, add function groups and configure. To do this, click + button in function group bar and add requested groups. Then you can change their names to be displayed in Touch Panel user interface.

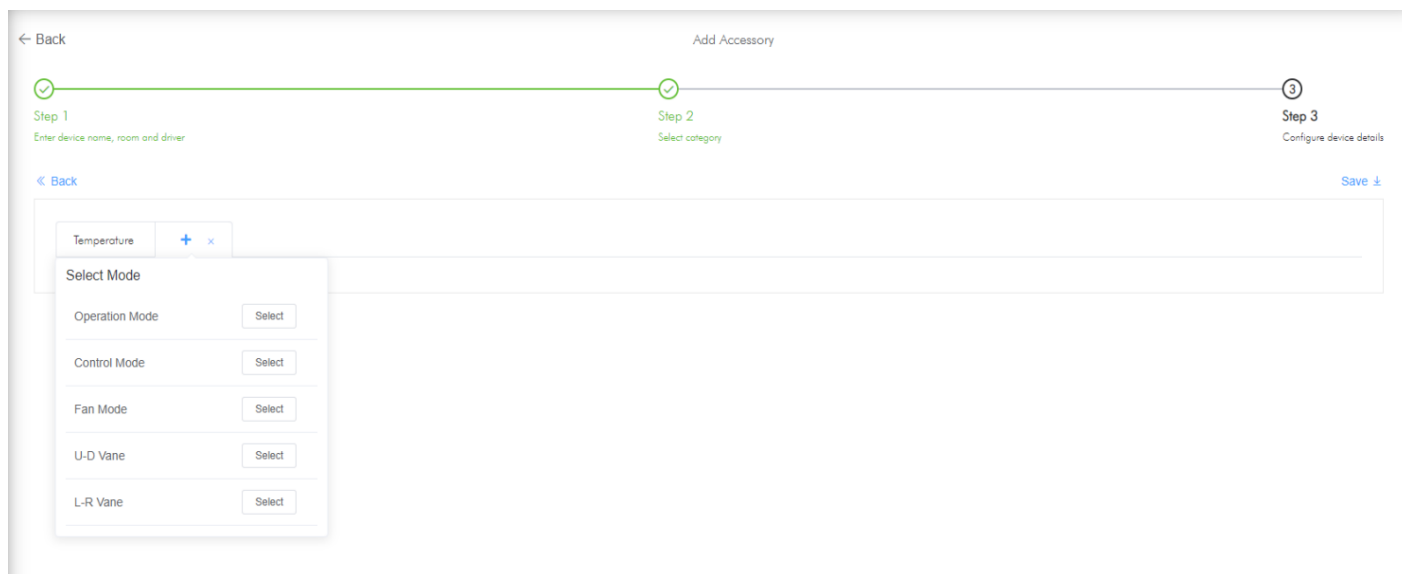

- Then enter requested information for functions and parameters.
- Click save to apply changes.

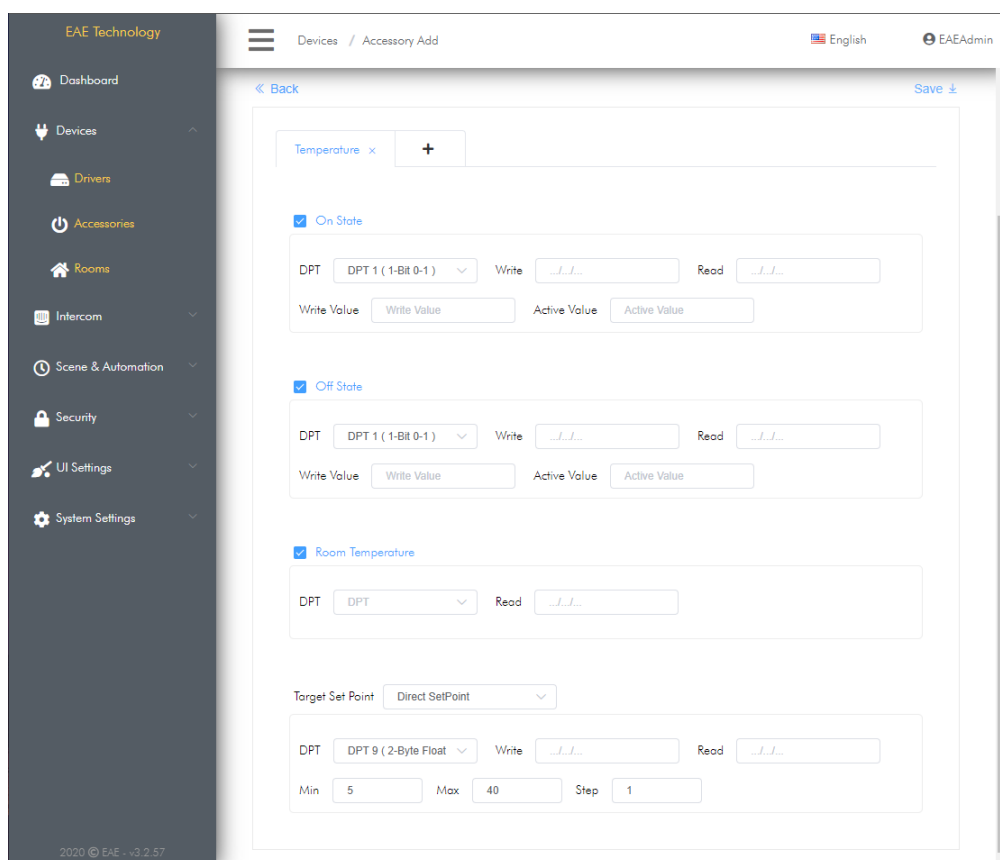

TEMPERATURE GROUP FUNCTIONS

ON State / OFF State Functions:

It is the function that enables thermostat to be On/Off.

i On and Off state can be programmed separately, taking into account the situation that need to send different data types to On and Off State.

i The On/Off function can be removed from thermostat accessory by deselecting function.

On State

DPT DPT 1 (1-Bit 0-1) Write xxxxxxxx Read xxxxxxxx

Write Value Write Value Active Value Active Value

Off State

DPT DPT 1 (1-Bit 0-1) Write xxxxxxxx Read xxxxxxxx

Write Value Write Value Active Value Active Value

Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address
 Write: Data write group address where On or Off command is sent
 Read: Data read group address where On or Off command is monitored
 Write Value: Value to be sent to data write group address
 Active Value: Expected value in data read group address

Room Temperature Function:

It is a function that displays the instantaneous temperature value measured by thermostat.

i Considering the situations that need to monitor different data types, Room Temperature function can be programmed by reading information from different data types.

Room Temperature

DPT DPT Read xxxxxxxx

Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address
 Read: Data read group address where temperature measured by thermostat is monitored

Target Setpoint Direct Function:

It is the function used to control and monitor target room temperature of the thermostat that calculate target temperature as an absolute numerical value.

 Target setpoint function can be programmed by writing and reading value with different data types, considering the situations that need to send or receive different data types.



Related Group Address and Parameters:

Target Set Point (Direct): It is the control method used for thermostats that calculate target temperature as an absolute numerical value

DPT: Type of data to be sent or received to group address

Write: Data write group address where target temperature of thermostat is sent

Read: Data read group address where target temperature of thermostat is monitored


Min: Minimum temperature that can be set

Max: Maximum temperature that can be set

Step: Step value of increasing or decreasing target temperature

Target Setpoint Shift Function :

It is the function used to control and monitor target temperature of thermostats that calculate target temperature according to a variable shift value

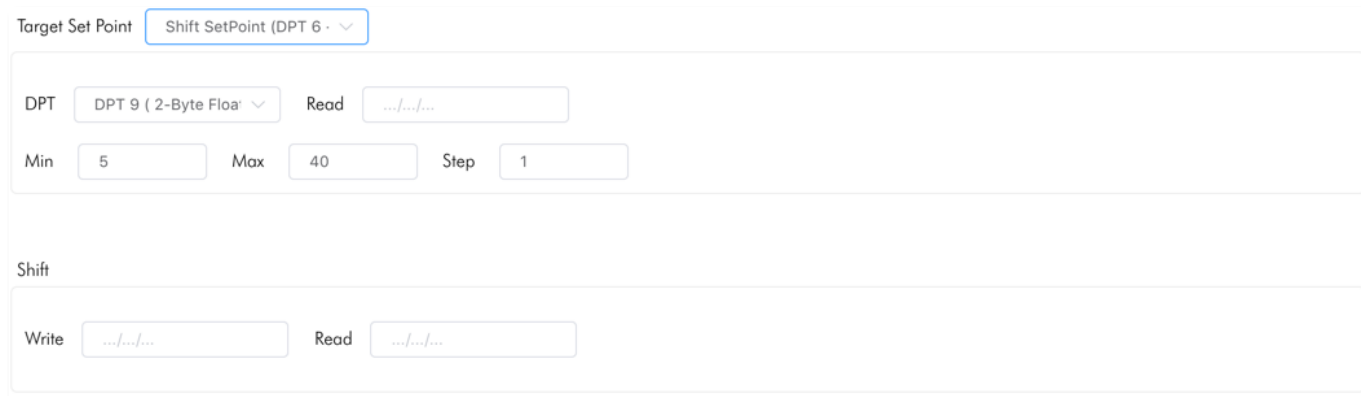

Related Group Address and Parameters:

Target Set Point (Shift): It is the control method used for thermostats that calculate the target temperature according to a variable shift value.

DPT: Type of data to be sent or received to group address

Read: Data read group address where target temperature of thermostat is monitored

Min: Minimum temperature that can be set

Max: Maximum temperature that can be set

Step: Step value of increasing or decreasing target temperature

Shift Write: Data write group address where shift value to change target temperature is sent

Shift Read: Data read group address where shift value to change target temperature is read


OPERATION MODE GROUP FUNCTIONS

It is the group that contains the functions that control the operation modes of thermostat. Includes Auto, Heat, Cool, Fan and Dry functions.

-  You can remove functions that thermostat does not support by deselecting function.
-  The name and icons of the functions displayed in user interface can be edited by integrator.

Auto Function:

It is the function that allows the thermostat to switch to auto mode.

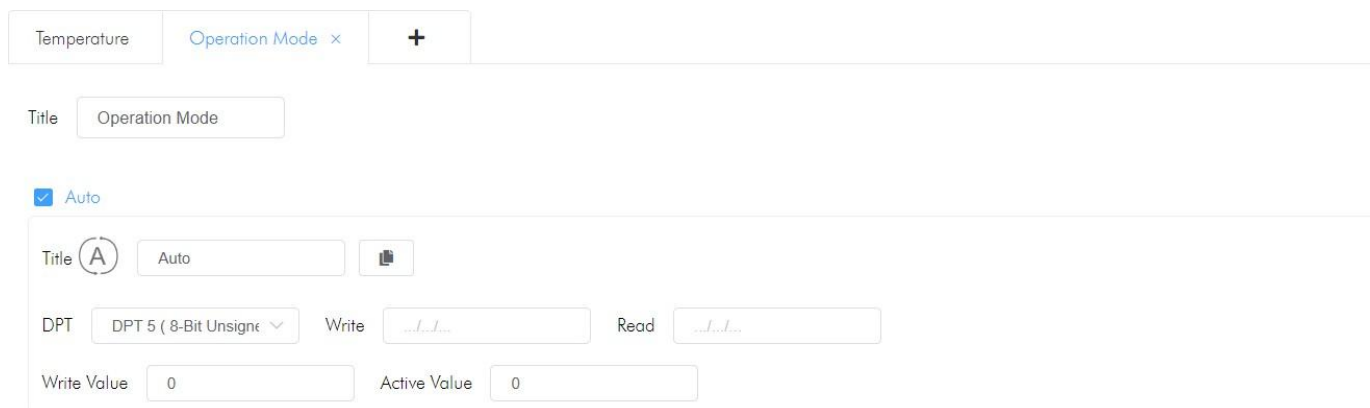


Related Group Address and Parameters:

DPT:	Type of data to be sent or received to group address
Write:	Data write group address where the auto command is sent
Read:	Data read group address where the auto command is monitored
Write Value:	Value to be sent to data write group address
Active Value:	Expected value in data read group address

Heat Function:

It is the function that allows thermostat to switch to heat mode.

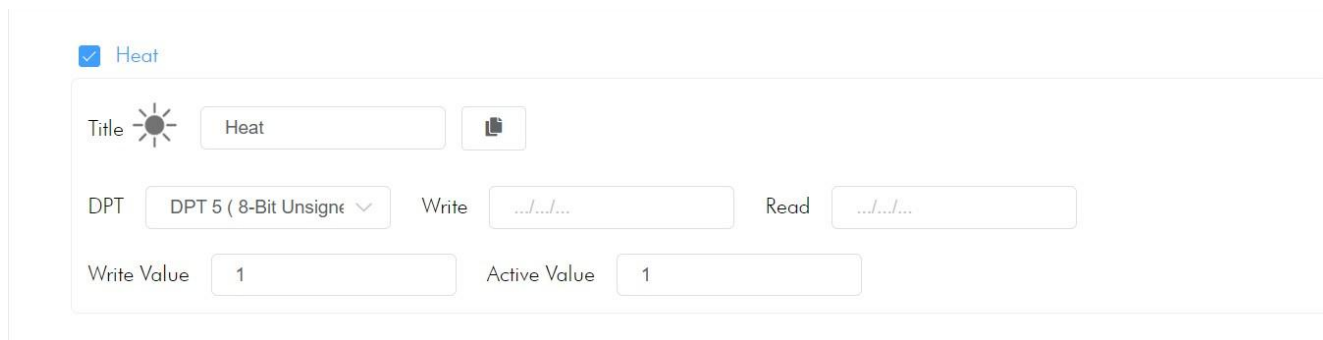

Related Group Address and Parameters:

DPT:	Type of data to be sent or received to group address
Write:	Data write group address where the heat command is sent
Read:	Data read group address where the heat command is monitored
Write Value:	Value to be sent to data write group address
Active Value:	Expected value in data read group address

Cool Function:

It is the function that allows thermostat to switch to cool mode.

☒ Cool

Title
 



DPT

DPT 5 (8-Bit Unsigned)

Write

Read

Write Value
Active Value

Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address
 Write: Data write group address where the cool command is sent
 Read: Data read group address where the cool command is monitored
 Write Value: Value to be sent to data write group address
 Active Value: Expected value in data read group address

Fan Function:

It is the function that allows thermostat to switch to fan mode.

☒ Fan

Title
 



DPT

DPT 5 (8-Bit Unsigned)

Write

Read

Write Value
Active Value

Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address
 Write: Data write group address where the fan command is sent
 Read: Data read group address where the fan command is monitored
 Write Value: Value to be sent to data write group address
 Active Value: Expected value in data read group address

Dry Function:

It is the function that allows thermostat to switch to dry mode.

☒ Dry

Title
 



DPT

 Write

 Read

Write Value

 Active Value

Related Group Address and Parameters:

DPT:	Type of data to be sent or received to group address
Write:	Data write group address where the dry command is sent
Read:	Data read group address where the dry command is monitored
Write Value:	Value to be sent to data write group address
Active Value:	Expected value in data read group address

CONTROL MODE GROUP FUNCTIONS


It is the group that contains the functions that control and monitor control modes representing the preset temperature values in the thermostat. It includes Auto, Comfort, Standby, Economy and Building Protection functions.

 You can remove functions that thermostat does not support by deselecting function.

 The name and icons of the functions displayed in user interface can be edited by integrator.

Auto Function:

It is the function that allows thermostat to switch to auto control mode.

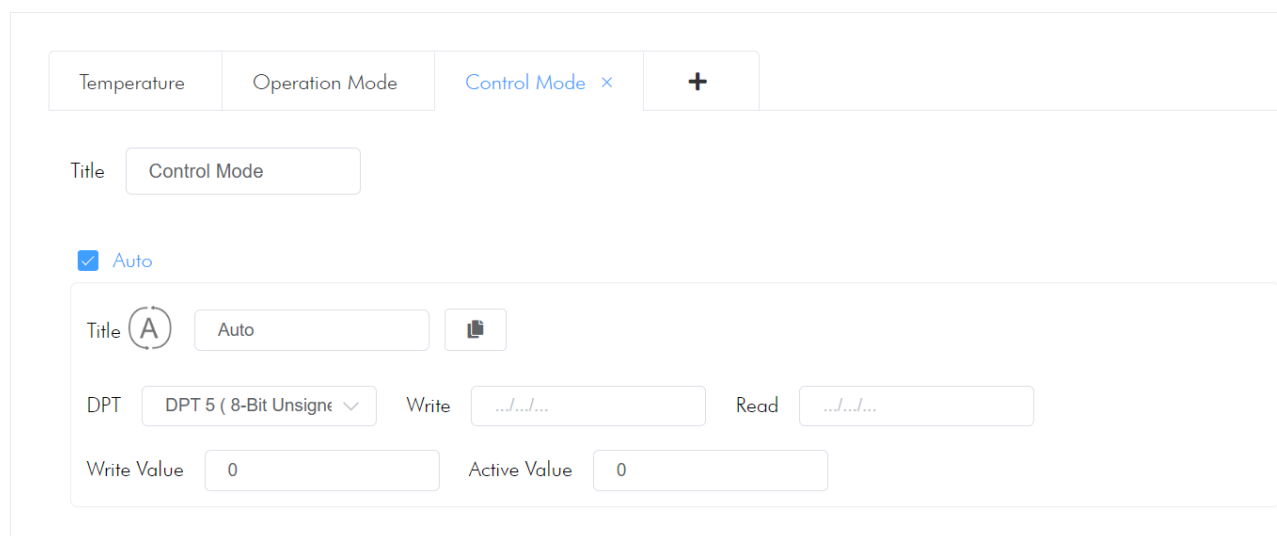

Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address
 Write: Data write group address where the auto command is sent
 Read: Data read group address where the auto command is monitored
 Write Value: Value to be sent to data write group address
 Active Value: Expected value in data read group address

Comfort Function:

It is the function that allows thermostat to switch to comfort control mode.



Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address
 Write: Data write group address where the comfort command is sent
 Read: Data read group address where the comfort command is monitored
 Write Value: Value to be sent to data write group address
 Active Value: Expected value in data read group address

Standby Function:

It is the function that allows thermostat to switch to standby control mode.

☒ Standby

Title		Standby	
DPT	DPT 5 (8-Bit Unsigned)	Write	Read
		...	...
Write Value	2	Active Value	2

Related Group Address and Parameters:

DPT:	Type of data to be sent or received to group address
Write:	Data write group address where the standby command is sent
Read:	Data read group address where the standby command is monitored
Write Value:	Value to be sent to data write group address
Active Value:	Expected value in data read group address

Night Function:

It is the function that allows thermostat to switch to night control mode.

☒ Night

Title		Night	
DPT	DPT 5 (8-Bit Unsigned)	Write	Read
		...	...
Write Value	3	Active Value	3

Related Group Address and Parameters:

DPT:	Type of data to be sent or received to group address
Write:	Data write group address where the night command is sent
Read:	Data read group address where the night command is monitored
Write Value:	Value to be sent to data write group address
Active Value:	Expected value in data read group address

Building Protection Function:

It is the function that allows thermostat to switch to building protection control mode.

☒ Protection

Title 

Protection



DPT

DPT 5 (8-Bit Unsigne

Write

Read

Write Value

4

Active Value

4

Related Group Address and Parameters:

DPT:	Type of data to be sent or received to group address
Write:	Data write group address where the building protection command is sent
Read:	Data read group address where the building protection command is read
Write Value:	Value to be sent to data write group address
Active Value:	Expected value in data read group address

FAN GROUP FUNCTIONS


It is the group that contains the functions that control the fan speed in the thermostat. Includes Auto, Lowest, Lower, Middle, Higher, Highest functions. In this way, a total of 5 fan speed levels and auto fan speed are supported.

 You can remove functions that thermostat does not support by deselecting function.

 The name and icons of the functions displayed in user interface can be edited by integrator.

Auto Function:

It is the function that allows thermostat to switch to auto fan speed.

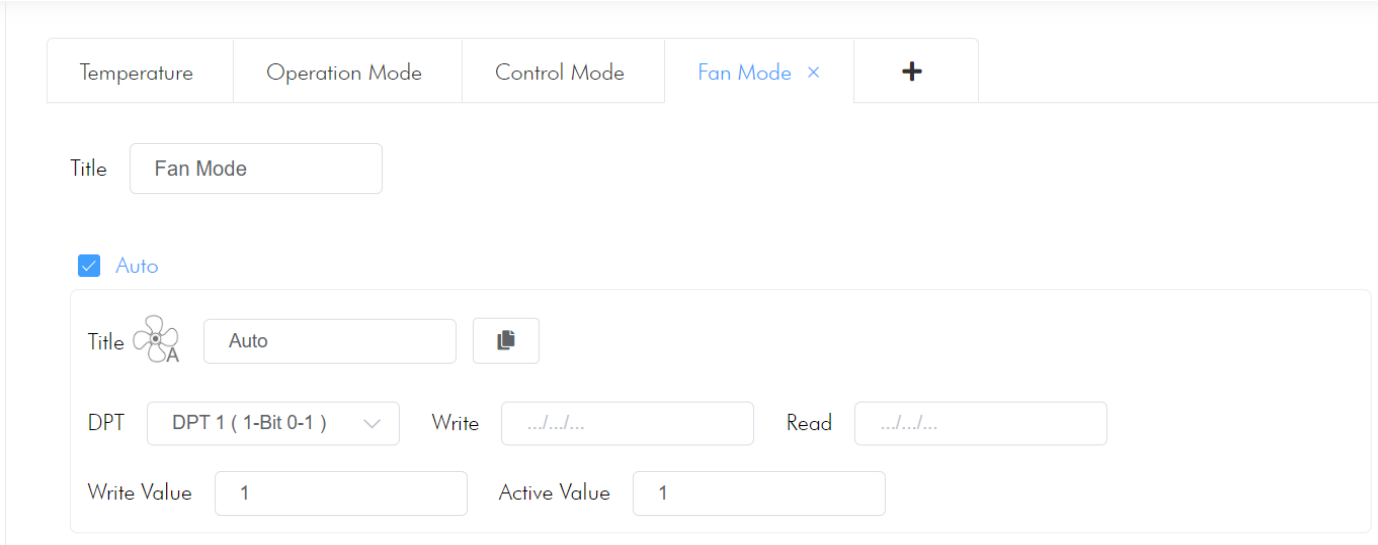

Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address
 Write: Data write group address where the auto fan speed command is sent
 Read: Data read group address where the auto fan speed command is read
 Write Value: Value to be sent to data write group address
 Active Value: Expected value in data read group address

Lowest Fan Speed Function:

It is the function that allows thermostat to switch to lowest fan speed.



Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address
 Write: Data write group address where the lowest fan speed command is sent
 Read: Data read group address where the lowest fan speed command is read
 Write Value: Value to be sent to data write group address
 Active Value: Expected value in data read group address

Lower Fan Speed Function:

It is the function that allows thermostat to switch to lower fan speed.

☒ Lower



Title Lower



DPT

DPT 5 (8-Bit Unsigned)

Write

.....

Read

.....

Write Value

40

Active Value

40

Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address

Write: Data write group address where the lower fan speed command is sent

Read: Data read group address where the lower fan speed command is read

Write Value: Value to be sent to data write group address

Active Value: Expected value in data read group address

Middle Fan Speed Function:

It is the function that allows thermostat to switch to middle fan speed.

☒ Middle



Title Middle



DPT

DPT 5 (8-Bit Unsigned)

Write

.....

Read

.....

Write Value

60

Active Value

60

Related Group Address and Parameters:

DPT: Type of data to be sent or received to group address

Write: Data write group address where the middle fan speed command is sent

Read: Data read group address where the middle fan speed command is read

Write Value: Value to be sent to data write group address

Active Value: Expected value in data read group address

Higher Fan Speed Function:

It is the function that allows thermostat to switch to higher fan speed.

☒ Higher

Title  Higher 

DPT

DPT 5 (8-Bit Unsigne ▾

 Write

...

 Read

...

Write Value

80

 Active Value

80

Related Group Address and Parameters:

- DPT: Type of data to be sent or received to group address
- Write: Data write group address where the higher fan speed command is sent
- Read: Data read group address where the higher fan speed command is read
- Write Value: Value to be sent to data write group address
- Active Value: Expected value in data read group address

Highest Fan Speed Function:

It is the function that allows thermostat to switch to highest fan speed.

☒ Highest

Title  Highest 

DPT

DPT 5 (8-Bit Unsigne ▾

 Write

...

 Read

...

Write Value

100

 Active Value

100


Related Group Address and Parameters:

- DPT: Type of data to be sent or received to group address
- Write: Data write group address where the highest fan speed command is sent
- Read: Data read group address where the highest fan speed command is read
- Write Value: Value to be sent to data write group address
- Active Value: Expected value in data read group address


7.1.5. PUNCH BUTTON

Punch Button Accessory is used to send a single data to a predetermined group address in KNX Systems. Mostly, it is used to run a KNX scene, to open a trigger-oriented garage door and similar applications.

MIOLA TOUCH PANEL UI VIEW

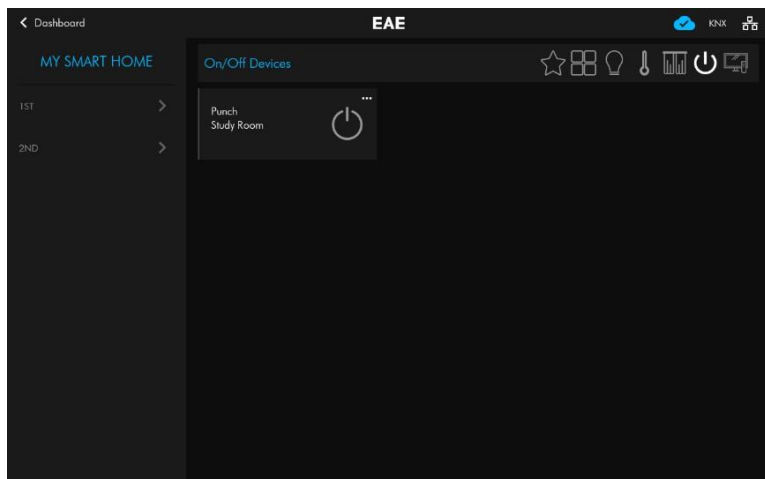

In summary view, name and icon of the device is displayed. Only monitor acknowledge when data is sent, because there is not any status related to this accessory. Just tap device to send value. Tap 3 dots in the upper right corner to reach detailed view.

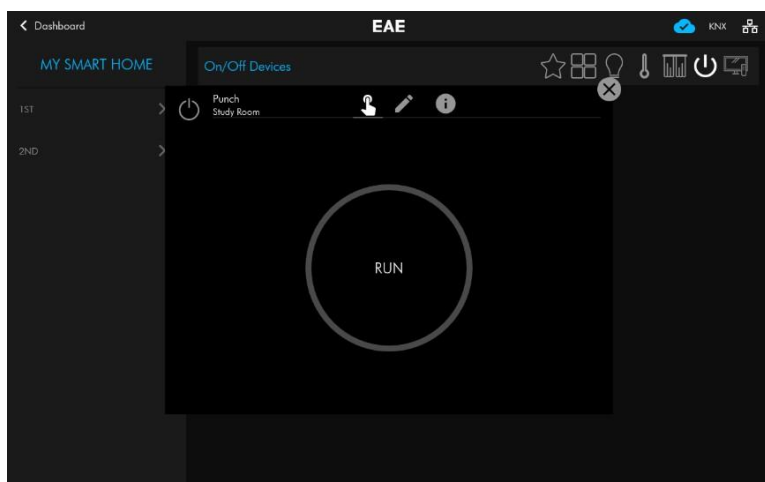


AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
Punch Button	Multiple Choice	Write

ADDING A NEW PUNCH BUTTON ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – Punch Button Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as Punch Button.
- Choose in which category you want the accessory to be displayed in user interface. (Lights, Shutters, Climate, Generic)
- In third step, enter required information and configure functions related to Punch Button accessory.
- Click save to apply changes.

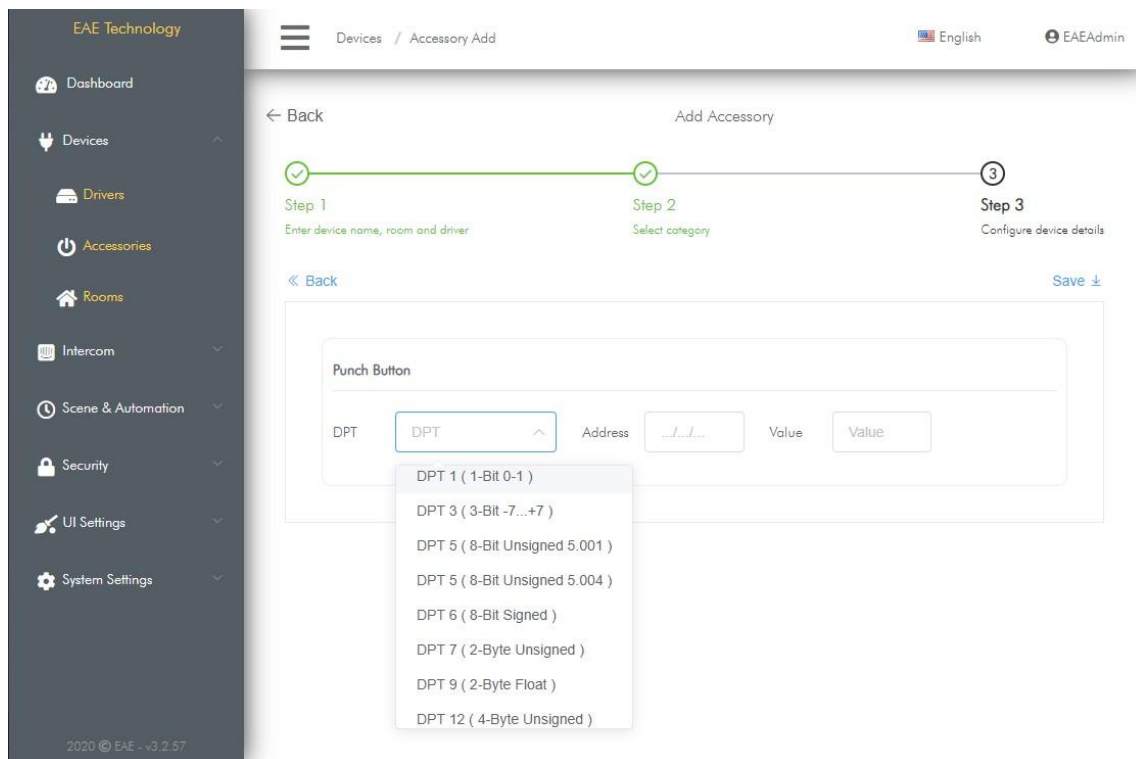

FUNCTIONS

Punch Button:

It is the function where you can send a single data to a KNX group address.

Related Group Address:

DPT:

Type of data to be sent or received to group address

Address:

Group Address to which data will be sent


Value:

Value to be sent to group address


7.1.6. BINARY BUTTON

Binary Button Accessory Type is used to send data with different data types to two different pre-determined group addresses. Mostly it is used to control multiple lighting or shutter devices controlled in a single group address.

MIOLA TOUCH PANEL UI

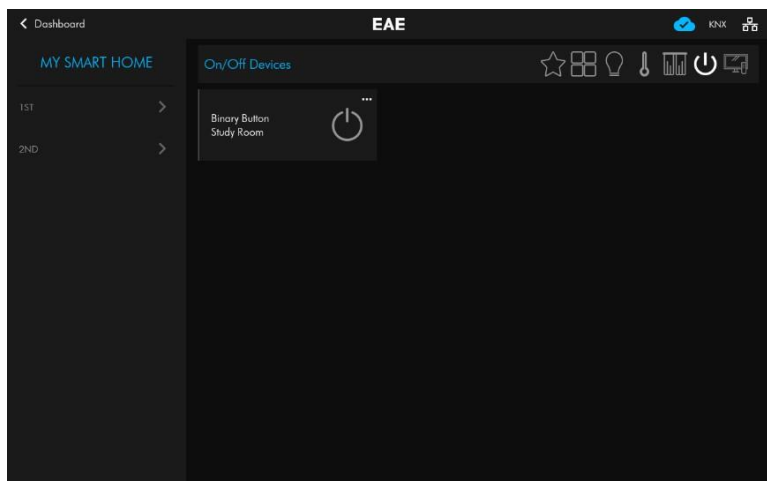

In summary view, name and icon of the device is displayed. Only monitor acknowledge when data is sent, because there is not any status related to this accessory. Just tap device to reach detailed view.

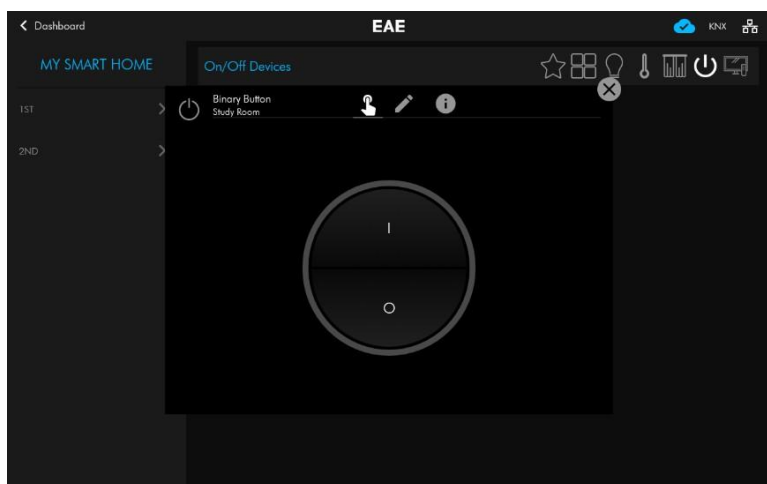

In detail view, 2 keypads placed to send different functions.


AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
On Button	Multiple Choice	Write
Off Button	Multiple Choice	Write

ADDING A NEW BINARY BUTTON ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – Binary Button Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as Binary Button.
- Choose in which category you want the accessory to be displayed in user interface. (Lights, Shutters, Climate, Generic)
- In third step, enter required information and configure functions related to binary button accessory.
- Click save to apply changes.

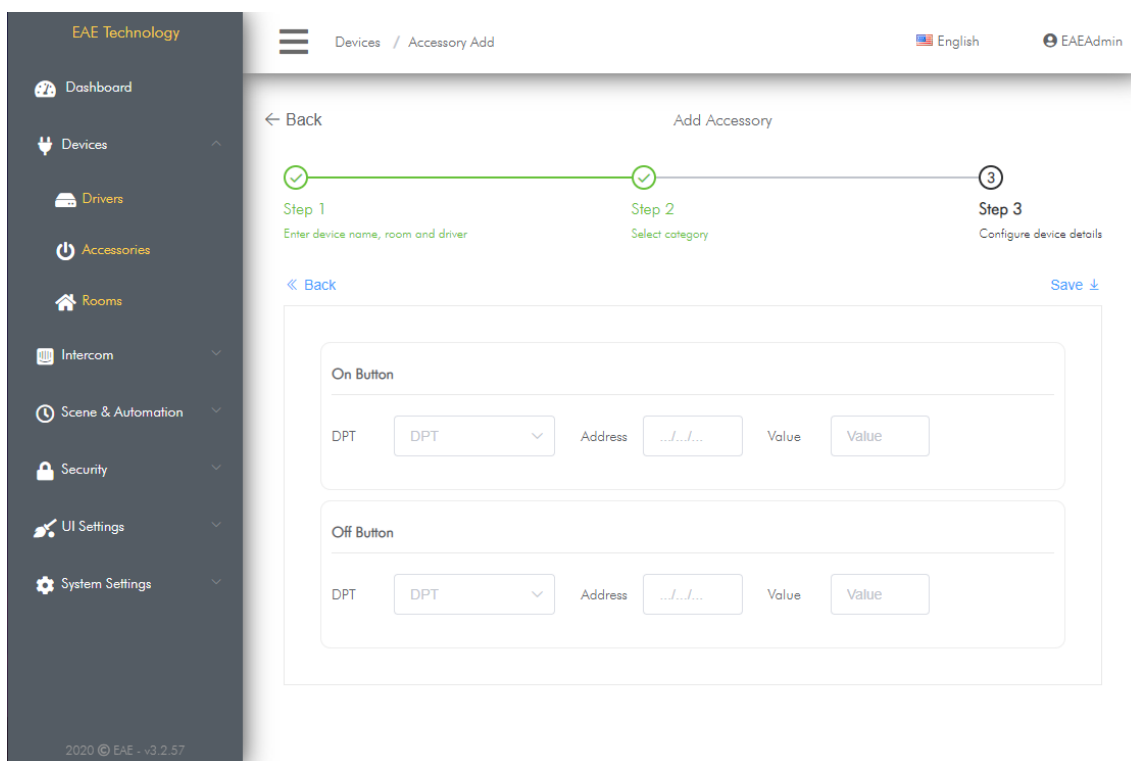

The screenshot displays the 'Add Accessory' wizard in the EAE Technology interface. The left sidebar contains navigation options like Dashboard, Devices, Drivers, Accessories, Rooms, Intercom, Scene & Automation, Security, UI Settings, and System Settings. The main area shows the wizard progress: Step 1 (Enter device name, room and driver), Step 2 (Select category), and Step 3 (Configure device details). The 'On Button' and 'Off Button' sections are visible, each with fields for DPT, Address, and Value.

FUNCTIONS

On Button:

It is the function where you can send a single data to a KNX group address.

Related Group Address:

DPT: Type of data to be sent or received to group address
 Address: Group Address to which data will be sent
 Value: Value to be sent to group address

Off Button:

It is the function where you can send a single data to a KNX group address.


Related Group Address:

DPT: Type of data to be sent or received to group address
 Address: Group Address to which data will be sent
 Value: Value to be sent to group address

7.1.7. SENSOR

Sensor Accessory allows to monitor status of digital security sensors connected to KNX Systems. KNX Sensor supports 6 different sensor types. These are motion, door, window, leak, gas and smoke sensors.

MIOLA TOUCH PANEL UI VIEW

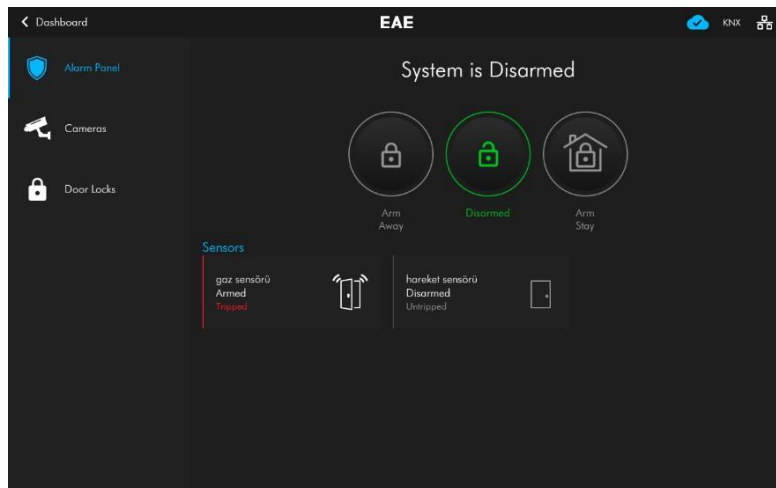

KNX Sensor Accessory type is displayed in security menu of user interface. The sensor's name, icon, arming status and trigger status are displayed.


AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
Sensor	Multiple Choice	Read

ADDING A NEW SENSOR ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – sensor Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as one of the sensor types.
- In third step, enter required information and configure functions related to sensor accessory.
- Click save to apply changes.

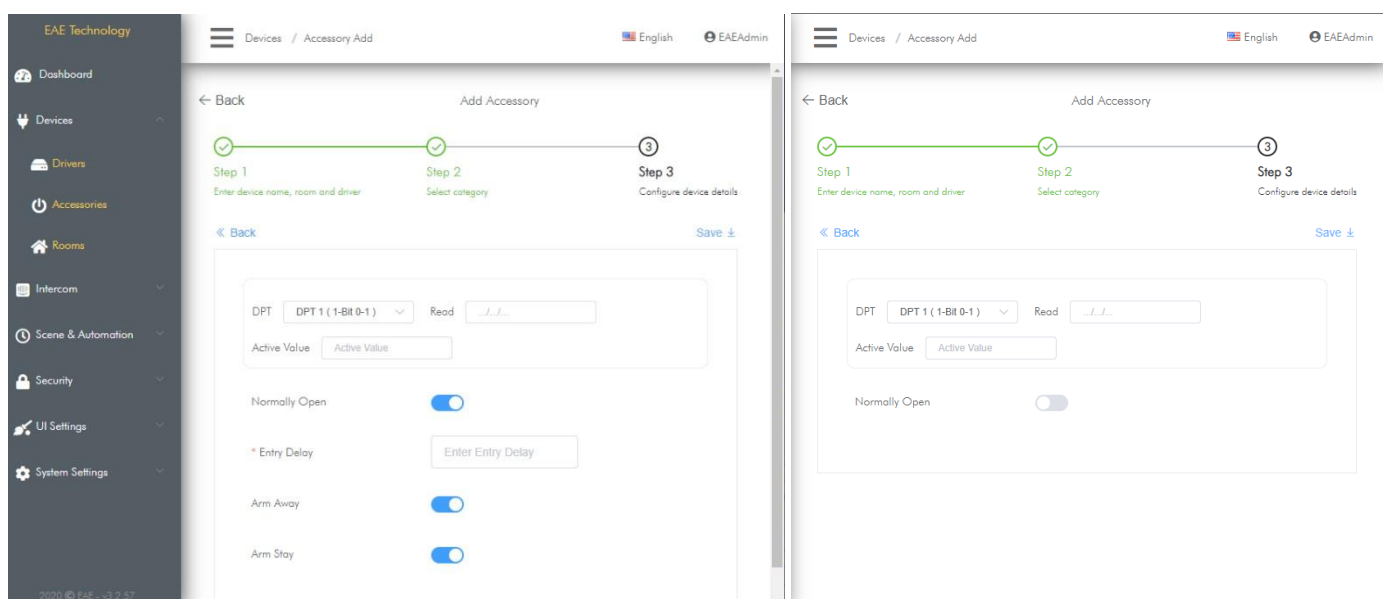

PARAMETERS

Normally Open:	Sensor connection type
Entry Delay:	Time to switch to violation state from the moment the sensor is armed and triggered
Arm Away:	Arming the sensor when security system switch to arm away mode
Arm Stay:	Arming the sensor when security system switch to arm stay mode



Gas, Smoke and Leak sensors are always armed (24/7)



Entry delay of Gas, Smoke and Leak sensors are always 0sec.

FUNCTIONS

Sensor:

It is the function that monitor the status of sensor it is connected to.

Related Group Address:

DPT: Type of data to be sent or received to group address

Read: Group address to monitor the sensor status

Active Value: Value expected to be monitored in the group address when the sensor is triggered

7.1.8. STATUS DISPLAY

Status Display Accessory is used to display a KNX data such as outdoor temperature, humidity, brightness level etc.

AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
Status Display	Multiple Choice	Read

ADDING A NEW STATUS DISPLAY ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – Status Display Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as Status Display.
- In third step, enter required information and configure functions related to accessory.
- Click save to apply changes.

PARAMETERS

Status Text: The text that will be displayed when the expected data value received

FUNCTIONS

Status Display:

It is the function that monitors the status text.

Related Group Address:


DPT: Type of data to be sent or received to group address

Read: Group address to monitor the status


7.1.9. RGBW DIMMER

RGBW Dimmer Accessory allows to control and monitor RGBW devices in KNX Systems by Miola Touch Panels. Central On/Off Control and status informations, central brightness control and status informations, color control with color wheel are controlled and monitored by this accessory type.


MIOLA TOUCH PANEL UI VIEW

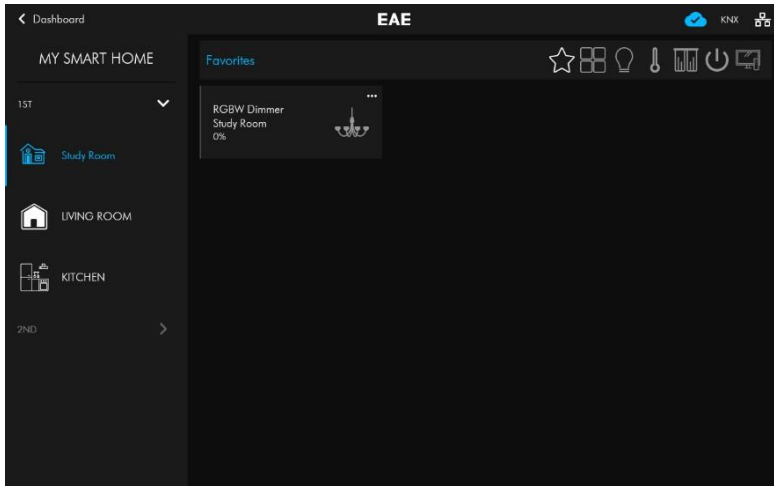

In summary view, brightness status of device is monitored. Just tap device to reach detailed view.

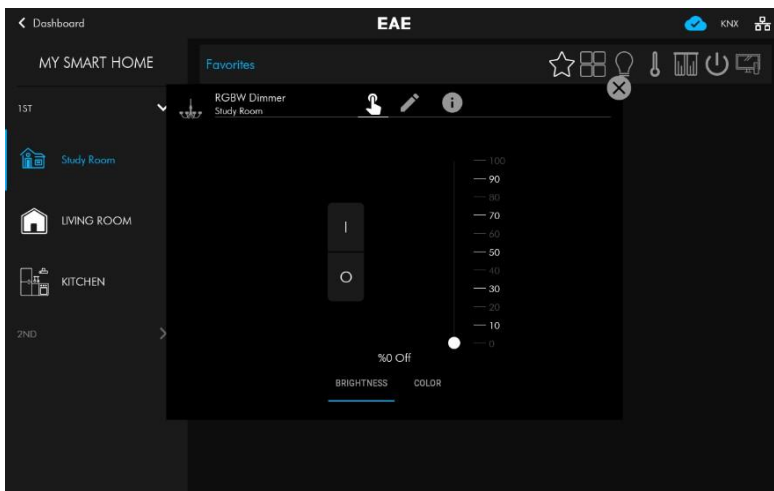

You can find detailed view of RGBW Dimmer Accessory in the left hand side. Central on/off and central brightness control and status information and changing brightness value in form of drag and drop are displayed and controlled under this function.

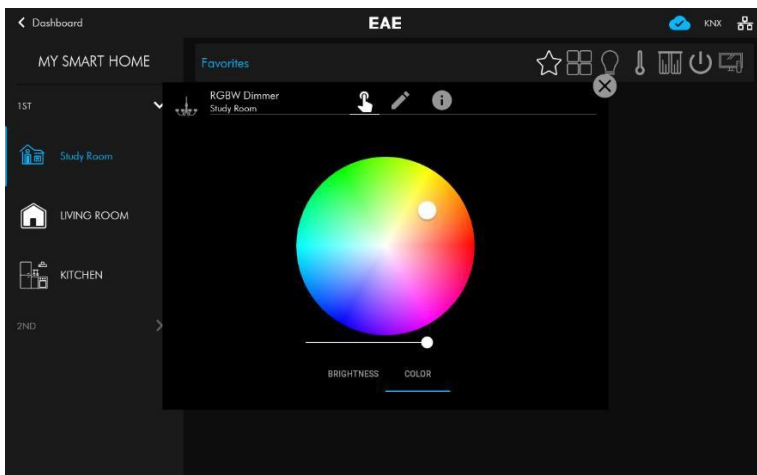

You can find detailed view of RGBW Dimmer Color function group in the left hand side. The Color Wheel and White light brightness value, are displayed and controlled under this function.


AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
Switch	1.001 (1 Bit)	Write, Read
Dimming Value	5.001 (1Byte)	Write, Read

ADDING A NEW RGBW DIMMER ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – RGBW Dimmer Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as RGBW Dimmer.
- In third step, enter required information and configure functions related to RGBW Dimmer accessory.
- Click save to apply changes.

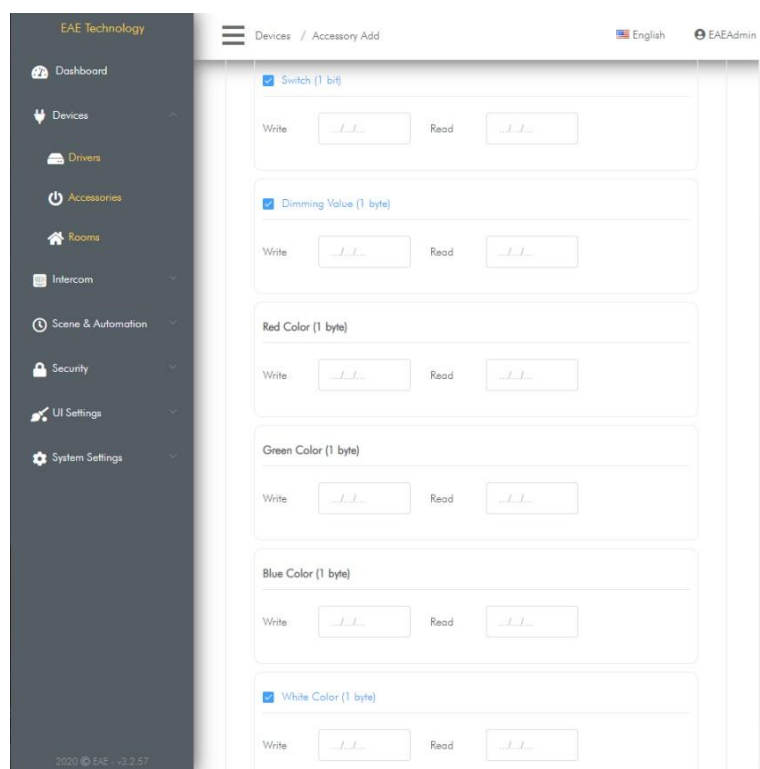

FUNCTIONS

Switch:

It is the function that enables the connected load to be switched on or off. When reading and writing data, it uses the 1-Bit 1.001 data point.

Related Group Addresses:

Switch (1-Bit) Write: Data write group address to which On/Off command is sent
 Switch (1-Bit) Read: Data read group address where On/Off status is monitored

Dimming Value:

It is the function that allows controlling and monitoring brightness value of the connected device. It uses 5.001 1 Byte Data Type when reading and writing data.


Related Group Addresses:

Dimming Value (1-Byte) Write: Data write group address to which brightness value of load is sent
 Dimming Value (1-Byte) Read: Data read group address where brightness value of load is monitored


7.1.10. AUDIO

Audio Accessory allows to control and monitor Audio devices in KNX Systems by Miola Touch Panels. Play/pause, volume, previous track, next track, shuffle, repeat, current track, album, artist, playlist controls and status informations are controlled and monitored by this accessory type.

MIOLA TOUCH PANEL UI VIEW

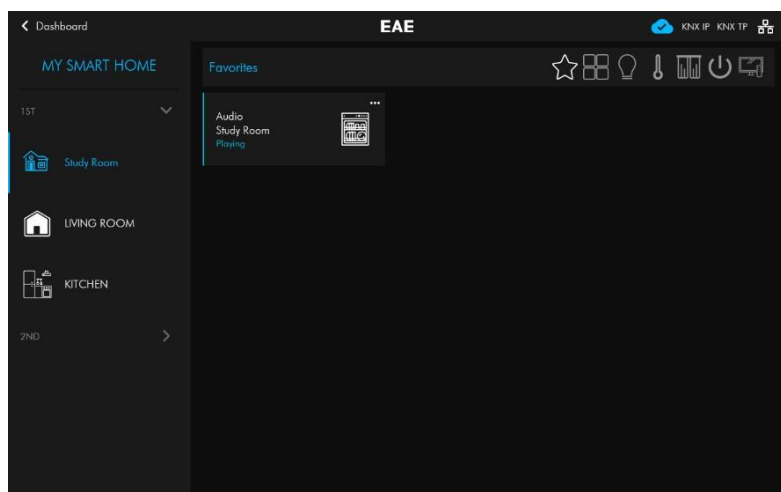

In summary view, playing or paused status of device is monitored. Just tap device to reach detailed view.

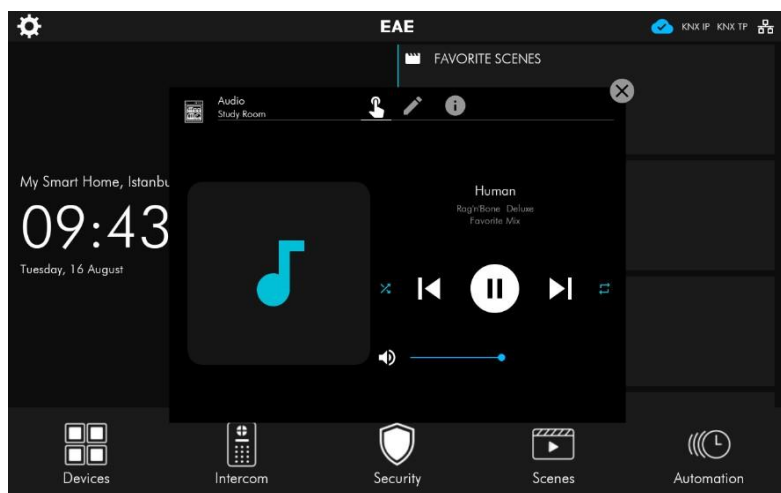

You can find detailed view of Audio function group in the left hand side. Play/pause, volume, previous track, next track, shuffle, repeat control and current track name, album, artist and play list informations are displayed and controlled under this function


AVAILABLE FUNCTIONS

Function Name	KNX Data Point	KNX Group Address
Play (1:Play, 0:Pause)	1.001 (1 Bit)	Write, Read
Volume	5.001 (1 Byte)	Write, Read
Mute (1:Mute, 0:Unmute)	1.001 (1 Bit)	Write, Read
Previous	1.001 (1 Bit)	Write
Next	1.001 (1 Bit)	Write
Current Track	16.000 (14 Byte)	Read
Current Album	16.000 (14 Byte)	Read
Current Artist	16.000 (14 Byte)	Read
Current Playlist	16.000 (14 Byte)	Read
Shuffle (1:Mix, 0:No Mix)	1.001 (1 Bit)	Write, Read
Repeat (1:Repeat, 0:No Repeat)	1.001 (1 Bit)	Write, Read

ADDING A NEW AUDIO ACCESSORY

Follow the steps in Adding New Accessory section, to add new KNX – Audio Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose KNX-TP or KNXNET-IP as driver.
- In second step, choose Accessory Type as Audio.
- In third step, enter required information and configure functions related to Audio accessory.
- Click save to apply changes.

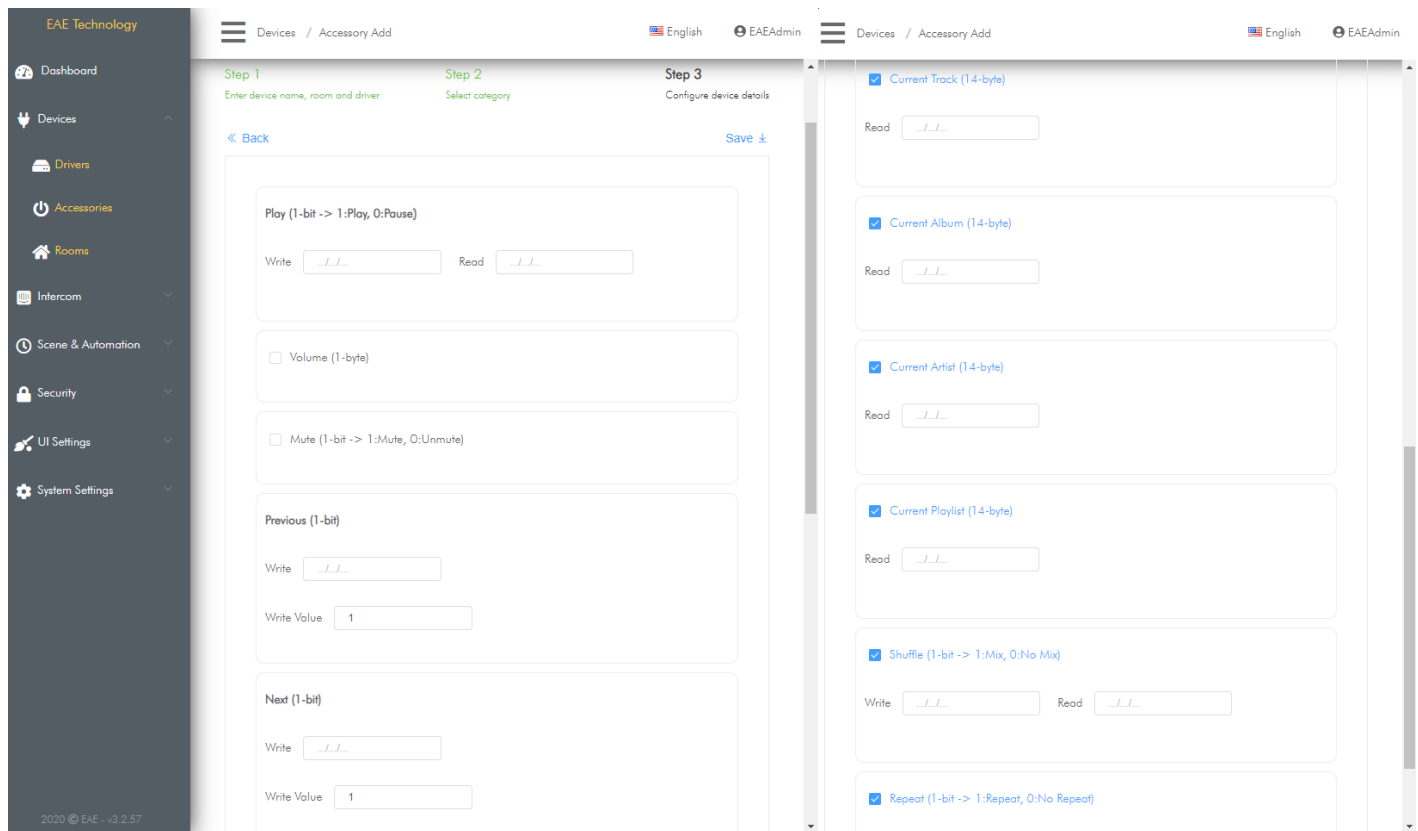

FUNCTIONS

Play (1-bit -> 1:Play, 0:Pause):

It is the function that allows the current track to be played or paused. When reading and writing data, it uses the 1-Bit 1.001 data point.

Related Group Addresses:

Play (1-Bit) Write: Data write group address to which Play/Pause command is sent
 Play (1-Bit) Read: Data read group address where Play/Pause status is monitored

Volume (1 Byte):

It is the function that allows changing volume level. When reading and writing data, it uses the 1-Byte 5.001 data point.

Related Group Addresses:

Volume (1-Byte) Write: Data write group address to which volume level command is sent
 Volume (1-Byte) Read: Data read group address where volume level status is monitored

Mute (1-bit -> 1:Mute, 0:Unmute):

It is the function that allows the volume to be muted or unmuted. When reading and writing data, it uses the 1-Bit 1.001 data point.

Related Group Addresses:

Mute (1-Bit) Write: Data write group address to which Mute/Unmute command is sent
 Mute (1-Bit) Read: Data read group address where Mute/Unmute status is monitored

Previous (1-bit):

It is the function that allows to skip to the previous track. When writing data, it uses the 1-Bit 1.001 data point.

Related Group Addresses:

Previous (1-Bit) Write: Data write group address to which previous track command is sent

Next (1-bit):

It is the function that allows to skip to the next track. When writing data, it uses the 1-Bit 1.001 data point.

Related Group Addresses:

Next (1-Bit) Write: Data write group address to which next track command is sent

Current Track (14-byte):

It is the function that allows to show the current track name. When reading data, it uses the 14-Byte 16.000 data point.

Related Group Addresses:

Current Track (14-Byte) Read: Data read group address where current track name is monitored

Current Album (14-byte):

It is the function that allows to show the current album name. When reading data, it uses the 14-Byte 16.000 data point.

Related Group Addresses:

Current Album (14-Byte) Read: Data read group address where current album name is monitored

Current Artist (14-byte):

It is the function that allows to show the current artist name. When reading data, it uses the 14-Byte 16.000 data point.

Related Group Addresses:

Current Artist (14-Byte) Read: Data read group address where current artist name is monitored

Current Playlist (14-byte):

It is the function that allows to show the current playlist name. When reading data, it uses the 14-Byte 16.000 data point.

Related Group Addresses:

Current Playlist (14-Byte) Read: Data read group address where current playlist name is monitored

Shuffle (1-bit -> 1:Mix, 0:No Mix):

It is the function that allows the playlist to be played shuffled or sequentially. When reading and writing data, it uses the 1-Bit 1.001 data point.

Related Group Addresses:

Shuffle (1-Bit) Write: Data write group address to which Mix/No Mix command is sent

Shuffle (1-Bit) Read: Data read group address where Mix/No Mix status is monitored

Repeat (1-bit -> 1:Repeat, 0:No Repeat):

It is the function that allows the current playlist to be played repeatedly or without repeating. When reading and writing data, it uses the 1-Bit 1.001 data point.

Related Group Addresses:

Repeat (1-Bit) Write: Data write group address to which Repeat/No Repeat command is sent

Repeat (1-Bit) Read: Data read group address where Repeat/No repeat status is monitored

7.2. SYSTEM I/O DRIVER

Miola 3.3 operating system includes new accessory types to control and monitor many different types of loads by Touch Panel built-in digital inputs and outputs.


Supported Accessory Types with System I/O Driver (Input Only):

- Motion Sensor
- Door Sensor
- Window sensor
- Leak Sensor
- Gas Sensor
- Smoke Sensor

7.2.1. SENSOR

Sensor Accessory allows to monitor status of digital security sensors connected to digital inputs of Touch Panel. Sensor supports 6 different sensor types. These are motion, door, window, leak, gas and smoke sensors.

MIOLA TOUCH PANEL UI VIEW

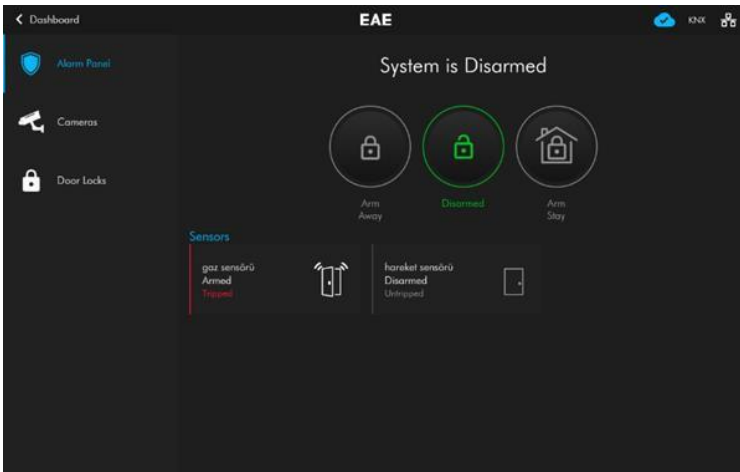


System I/O Sensor Accessory type is displayed in security menu of user interface. The sensor's name, icon, arming status and trigger status are displayed.

ADDING A NEW SENSOR ACCESSORY

Follow the steps in Adding New Accessory section, to add new System I/O – sensor Accessory:

- Go to Add a new Accessory Wizard.
- In first step, enter accessory name, icon, room and another information. Choose System I/O as driver.
- In second step, choose Accessory Type as one of the sensor types.
- In third step, enter required information and configure functions related to sensor accessory.
- Click save to apply changes.

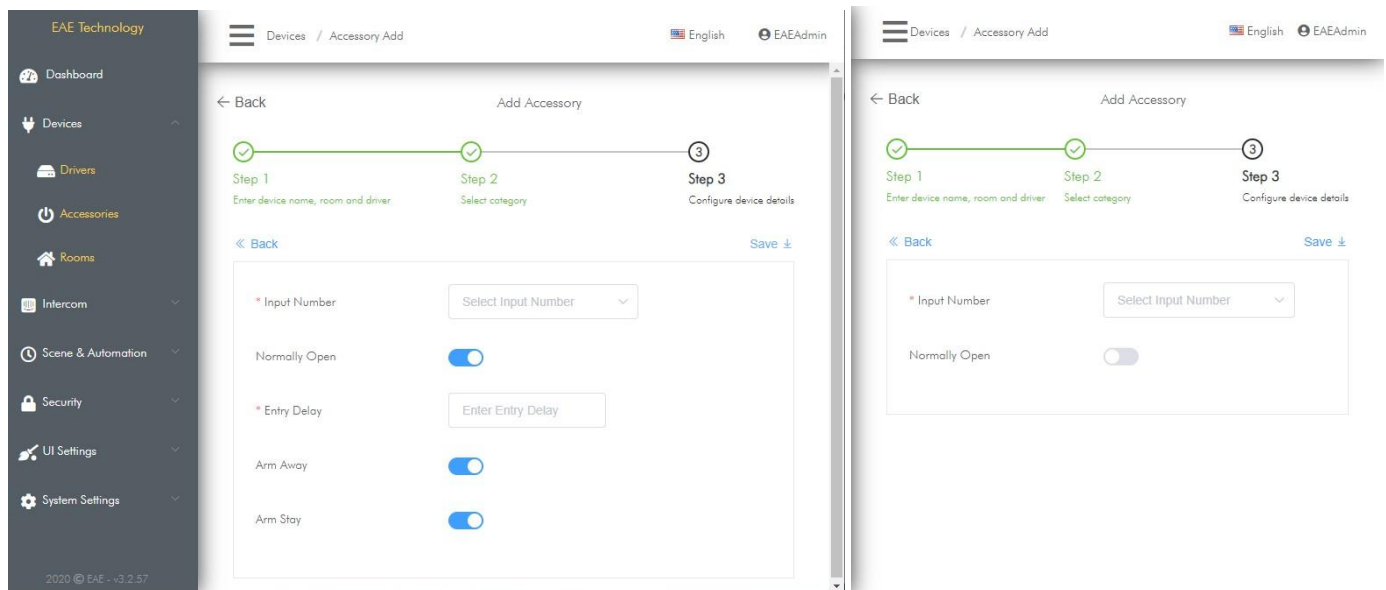

PARAMETERS

Input Number:	Number indicating which digital input of Touch Panel the sensor is connected to
Normally Open:	Sensor connection type
Entry Delay:	Time to switch to violation state from the moment the sensor is armed and triggered
Arm Away:	Arming the sensor when security system switch to arm away mode
Arm Stay:	Arming the sensor when security system switch to arm stay mode



Gas, Smoke and Leak sensors are always armed (24/7)



Entry delay of Gas, Smoke and Leak sensors are always 0sec.

8. SCENES

8.1. INTRODUCTION

Scenes are batch operations where multiple actions of multiple accessories can be performed with a single command. Scenes can be created and edited by the end user from Touch Panel user interface or by integrator from Programming Interface.



A scene created by integrator in programming interface has following additional features:

- The scene created by integrator may be invisible in Touch Panel user interface.
- The scene created by integrator can be non-editable from Touch Panel user interface.
- The scene created by integrator can be non-deletable from Touch Panel user interface.

8.2. CREATING A NEW SCENE

A new scene is created in Programming Interface with Create a new Scene Wizard in 4 steps. To do this:

First Step

- Go to Scenes&Automation > Scenes
- Click button
- Create a new scene wizard will appear.
- In the first step, name, icon and the room of the scene is determined.
- Then whether the scene is a favorite, visible or invisible in user interface and whether the settings can be edited by end user is determined.
- After all, click next button to proceed.

Scene Wizard Step 1

Second Step

- In the second step, whether the action group is delayed or not, if there is a delay, duration of delay is determined
- Then, accessories that will perform action are selected.
- After all, click next button to proceed.

Step 1: New Scene

Step 2: Add/Update Action Group

Step 3: Configure Actions

Step 4: Scene Detail

Delayed Action: ☒


Hour: 0 Minute: 5 Second: 0

Accessory	Room	Category
☒ Ali	Meeting Room	Dimmer
☐ Cam Tarafı Group	Study Room	Dimmer
☒ Emre Dalgıç	Study Room	Dimmer
☐ Fuat 1	Study Room	Dimmer
☒ Fuat 2	Study Room	Dimmer
☒ Halil Akpınar Arka	Study Room	Dimmer

Scene Wizard Step 2

Third Step

- In the third step, the actions of selected accessories are selected.
- If multiple actions are selected for an accessory, you can view the actions by clicking  button on Accessory.
- After all, click next button to proceed.

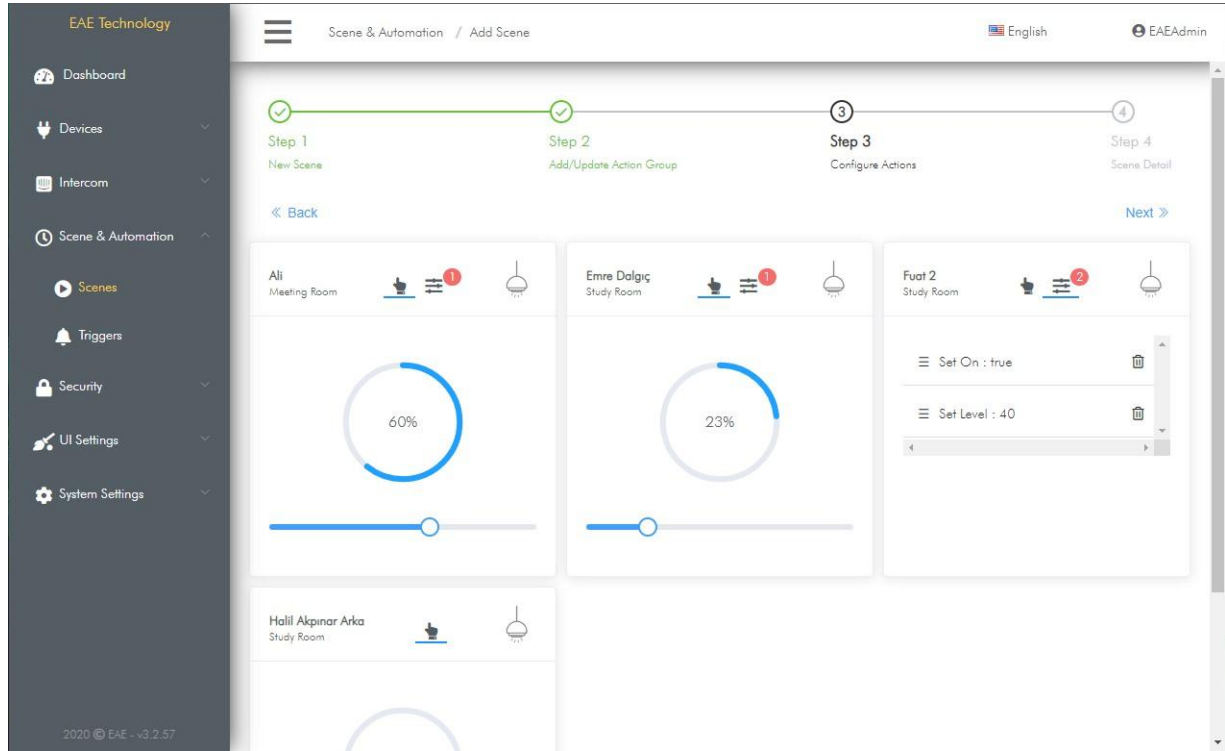

Scene Wizard Step 3

Fourth Step

- In the fourth step, it is decided to complete the scene or add a new action group.
- Check scene information and make changes before saving scene.
- Created action groups are listed. These action groups can be modified or deleted.
- A new action group with different delay time can be added.
- After all, click next button to proceed.

Step 1 New Scene

Step 2 Add/Update Action Group

Step 3 Configure Actions

Step 4 Scene Detail

Save

* Scene New Scene

Icon Icon 4

* Room KITCHEN

Favorite Invisible Modifiable

+ Add Action Group

Delay	Action Count	Actions
5 min delayed	4 actions	

2020 © EAE - v3.2.57

Scene Wizard Step 4



Only one Action Group can be added to a specific delay time.

8.3. EDITING SCENES


You can edit previously added scene from Programming Interface. To do this:

- Go to Scenes&Automation > Scenes
- Click  button in the operations column of the scene you want to edit.
- Scene wizard will appear. Here you can edit desired information of the scene.

8.4. DELETING SCENE

You can delete a previously created scene from Programming Interface. To do this:

- Go to Scenes&Automation > Scenes
- Click  button in the operations column of the scene you want to delete.
- Scene will be deleted after confirming delete process in the confirmation box.

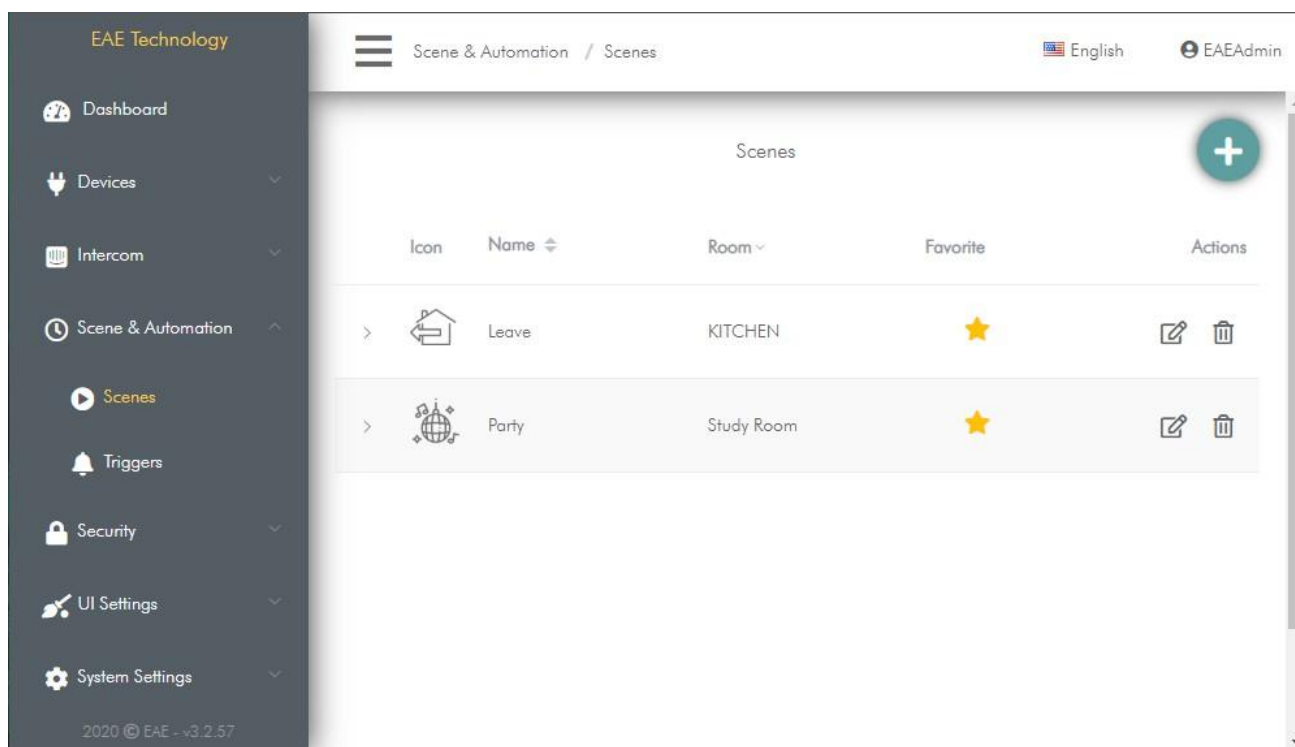

9. TRIGGERS

9.1. INTRODUCTION

Trigger is the act of performing actions when one or more predefined conditions are met. Actions and conditions are defined by integrator in Programming Interface.



Trigger Samples

- Turn on garden lights when every day at 19:00.
- Send push notification when fire alarm occurs
- Turn off Heat Pump when underfloor heating 1 and heating zone 2 is Off.

Types of Conditions:

- Accessory Status based:
 - On/Off state of all switch accessories
 - On/Off and Brightness level of dimmer accessories
 - Position of Shutter Accessories
 - Room and Target Temperature of Thermostat accessories
 - Trigger and violation status of Sensor Accessories
- Security System Status and Modes based:
 - Arming away status
 - Arming stay status
 - Armed away mode
 - Armed stay mode
 - Disarmed mode
 - No violation status
 - Entry & Exit countdown status
 - Burglar alarm status
 - Fire alarm status
 - Smoke alarm status
 - Leak alarm status
- Intercom System based:
 - Incoming call from a contact
 - Outgoing call to a contact
- Application status and doorbell based
 - Doorbell is triggered
 - Application exit from screen saver mode
- Time based
 - Every hour at specified minute
 - Every day at specified time
 - Every week at specified day at specified time
 - Every month at specified day at specified time
 - One time at specified date and time in calendar

Action Types:

- Accessory based
 - On/Off
 - Dim level
 - Position level of Shutter
 - Setpoint temperature and modes of thermostat
 - Run Binary button and punch button

- Sending value to group address of KNX bus
 - Send a specific value to KNX group address



It is useful to send data to KNX bus line after a condition has been met.

Example: Switching all thermostats from heating to cooling mode on a specified date

Example: All KNX devices switch into alarm mode in case of security alarm

- Run a scene
- Change security system mode (disarm, arm stay, arm away)
- Dial an intercom call to a contact
- Send HTTP command
- Send Push Notification to Miola Mobile App



Example: Send "Security System disarmed" notification when security system is disarmed

Example: Send push notification when water valve is turned off.

- Add delay between actions

9.2. ADDING A NEW TRIGGER

In this section, you can add a trigger to Touch Panel with Miola 3.3 operating system. To do this:

- Go to Scenes&Automation > Triggers
- Click  button
- Add Trigger wizard will appear
- Enter the name of trigger
- Click When button to add a condition.

Name

WHEN
Security Mode Equals To >

THEN
For example: Turn on the environmental lighting, turn off after 60 seconds >

- Choose time or accessory based condition

Your Smart Home can automatically perform many actions for you. Say what you want to do and your smart home will do it for you. Please start the configuration by choosing one of the available trigger types below

 Device Oriented
Includes trigger types such as accessory status changes, intercom calls, and security mode change >

 Schedule Oriented
Includes types triggered periodically at a specific time or according to sunrise and sunset >

- You can add multiple condition. You can combine conditions with AND and OR logical gates.

When 

(Bed Ambient Lights Switch Equals To On AND Doorbell Ringing Equals To Ringing start)

AND + x

+ x
Accessory Bed Ambient I Switch Equals To On

+ x
Doorbell Ringing Equals To Ringing start

- Click  button after all conditions are added
- Click Then button to add action

Name

WHEN
Security Mode Equals To >

THEN
For example: Turn on the environmental lighting, turn off after 60 seconds >

- You can add multiple actions to condition.



You can delay between actions.

Then

Turn on Bed Ambient Lights, 6000 ms gecikme ekle, Knx Değer Gönder (Dpt:5.004, Adres:9/8/7, Değer:153), 1000 ms gecikme ekle, , Push Bildirimi Gönder (,)

Accessory ▾ Bed Ambient I ▾ Set Power Or ▾ Turn on ▾

Add Delay ▾ - 6000 + ms

Send Knx Value ▾ DPT 5 (8-Bit ▾ 9/8/7 153

Add Delay ▾ - 1000 + ms

Send Http Request ▾ http://

Send Push Notifica ▾ Title Message

+ Add Action

- Click  button after all actions are added.
- Click  button after all information are set for trigger.

9.3. EDITING TRIGGERS

You can edit previously added triggers in Programming Interface. To do this:

- Go to Scenes&Automation > Triggers
- Click  button of the trigger you want to edit in the actions column.
- Trigger wizard will appear. Here you can edit any information of the trigger

9.4. DELETING TRIGGERS

You can delete previously added triggers in Programming Interface. To do this:

- Go to Scenes&Automation > Triggers
- Click  button of the trigger you want to delete in the actions column.
- Trigger will be deleted after confirming delete process in the confirmation box.

10. INTERCOM

10.1. INTRODUCTION

Touch Panels with Miola 3.3 operating system offer IP Based intercom calls using SIP 2.0 communication protocol. Highlights:

- SIP 2.0 peer-to-peer intercom calls can be generated without need of SIP Server.
- Automatic Contacts synchronization
- Shortcut functions available during calls
- Do not disturb mode
- Detailed view of call history

Automatic Contacts Synchronization

Touch Panels with Miola 3.3 operating system can recognize each other with multicasting technology when connected to same local network. In this way, Miola Touch Panels automatically registered to each other's contacts. It facilitates commissioning process, especially in large scale residential projects.



Multicasting: It is a technology of transporting an information to more than one point using the least bandwidth.



There should be no special configurations on the network to block multicasting packets (such as firewall or special router configurations)


SIP Server Enabled

Touch Panels with Miola 3.3 operating system can be integrated with 3rd Party SIP Servers. So that, Miola Panel can communicate with SIP devices over the 3rd party SIP servers.

10.2. INTERCOM SETTINGS

This is the section where intercom settings of Touch Panel are configured. To do this:


- Go to Intercom > Intercom Settings
- Enter the name you want Touch Panel to be displayed in the contacts of other Touch Panels
- If you want Touch Panel to be displayed in Contacts of other Touch Panels, you can turn-on "Automatic Contact Synchronization".
- Click button to save changes.

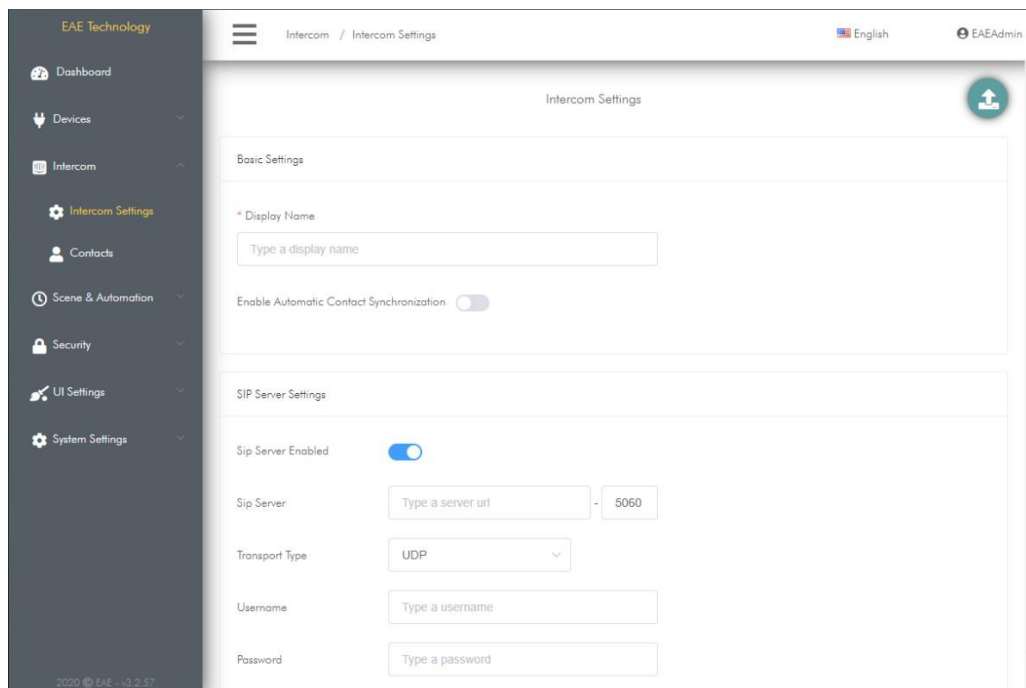

10.3. ADDING NEW CONTACT

It is the section where contact is added to intercom contacts of Touch Panel. To do this:

- Go to Intercom > Contacts
- Click  button to add a new contact.

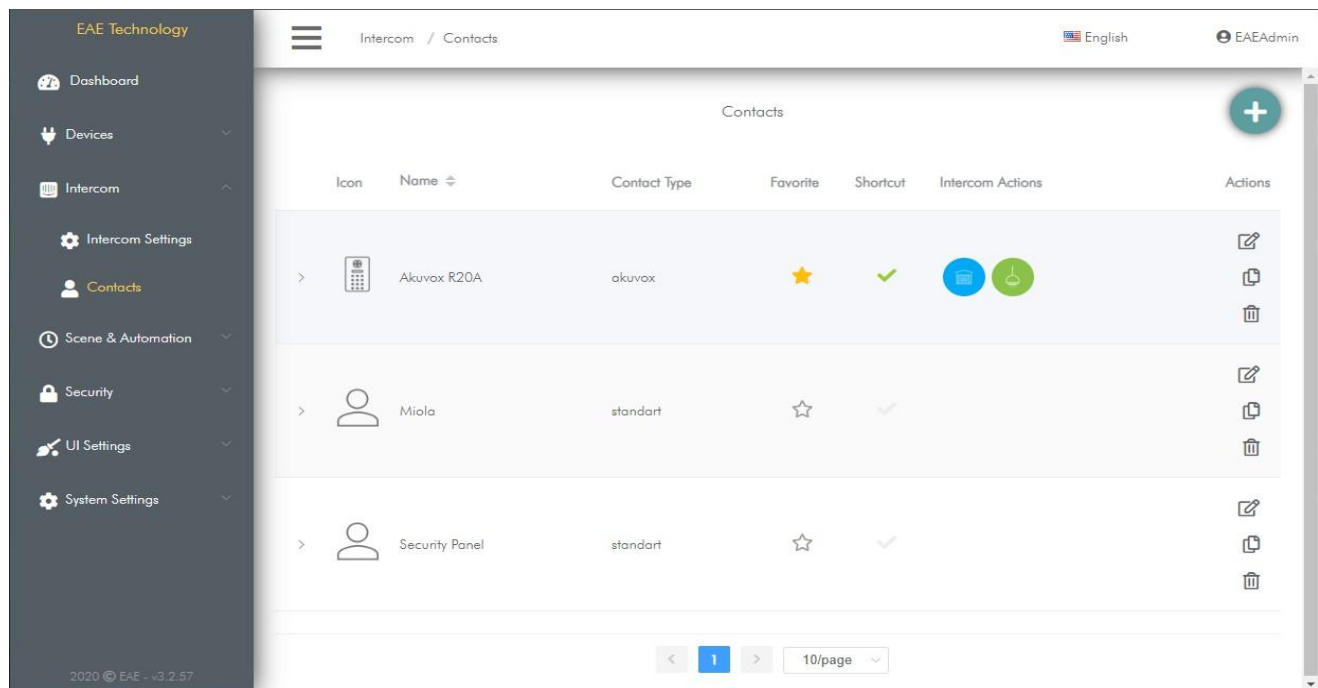

Intercom Contacts Page

- On the opening page, enter name, icon and IP address of the Contact.
- Choose Contact Type.
- If contact is an outdoor station and has a camera, enter RTSP and Snapshot URL.
- If you want to add an action for contact, click add action button. Action types that can be added are DTMF command, HTTP request and an accessory action of Miola operating system. These actions can be used during call with the contact.
- If you want to use these actions without call, you can mark them shortcut. In this case, action is displayed in the Intercom Shortcuts Widget on the dashboard of user interface.
- Click  button to save changes.


i RTSP URL is used to display camera before call is answered when a call received from outdoor station.

i Snapshot URL is used to display the picture of visitor at missed calls in call history.

10.4. EDITING CONTACTS

In this section, you edit previously added contacts. To do this:

- Go to Intercom > Contacts
- Click  button of the contact you want to edit in operations column
- You can edit contact information on this page.

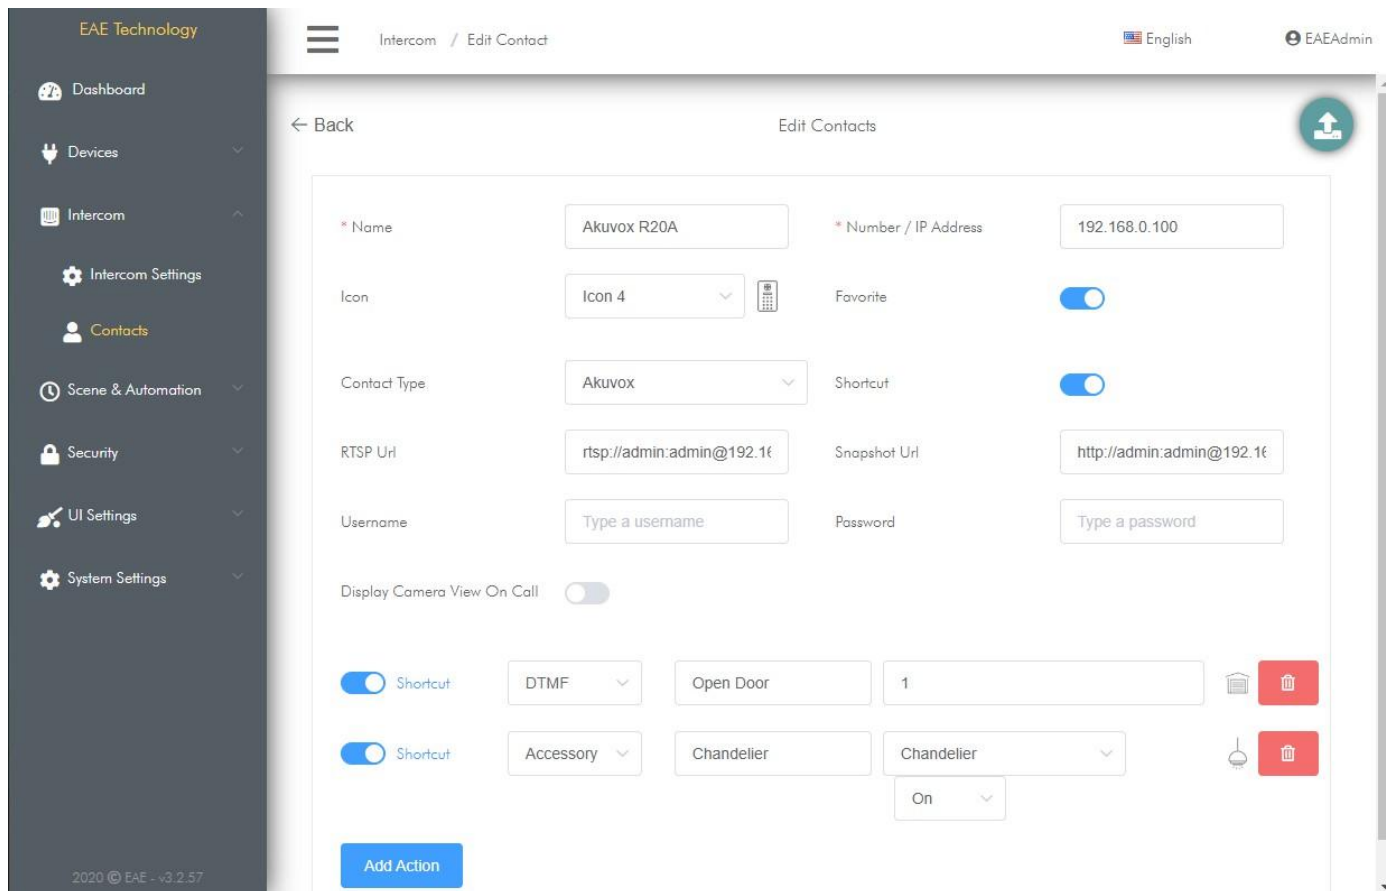

Intercom Contacts Add / Edit

10.5. DELETING CONTACTS

In this section, you can delete previously added contacts. To do this:

- Go to Intercom > Contacts
- Click  button of the contact you want to delete in operations column
- Contact will be deleted after confirming delete process in the confirmation box.

11. SECURITY PANEL

11.1. INTRODUCTION

You can control and monitor sensors and IP Cameras you have defined on Touch Panel and receive push-notifications with advanced Security Panel in Miola 3.3.



You can also add KNX Sensors to Security System as you can connect security sensors to digital inputs of Touch Panel.

Three different Security modes are defined to control sensors defined on Touch Panel:

- Arm Away
- Arm Stay
- Disarm

Security sensors can be defined in different types in Miola 3.3. operating system:

- Motion Sensor
- Door Sensor
- Window Sensor
- Leak Sensor
- Gas Sensor
- Smoke Sensor

11.2. ADDING NEW SENSOR

In Miola 3.3 operating system, there are 2 drivers that support sensor accessories. These are System I/O and KNX drivers.

- You can find instructions to add sensor related to KNX drivers at page 31.
- You can find instructions to add sensor related to System I/O driver at page 64.

11.3. SECURITY PANEL SETTINGS

Panel Settings

Security Panel settings are configured in this section. To do this:

- Go to Security > Panel Settings
- Enter Entry Delay as secs.
- If you want to hear countdown notification while security panel is arming away, turn on "Arm away sound"
- If you want to hear countdown notification while security panel is arming stay, turn on "Arm stay sound"
- If you want to hear warning notification of waiting password status, turn on "Entry delay sound".
- Enter sound level for security notifications between 0-100.
- Click Save to save changes.

Arming Settings

In this section, arming status of sensors are determined via security system modes. To do this:

- . Go to Security > Panel Settings
- Select in which security system mode the sensors will be armed.

i Arming sensor 24/7 means sensor is always armed in Armed away, Armed stay and also disarmed modes.

- Different entry delays can be defined for each sensor. For this, Entry delay value in the sensor list must be entered in seconds.
- Click save to apply changes.

Arming Settings Save						
Icon	Name	Category	Armed in Stay Mode	Armed in Away Mode	7/24 Mode	Entry Delay
	Door Sensor	Sensor Door	☒	☒	☐	10
	Leak Sensor	Sensor Leak	☒	☒	☒	0
	Motion Sensor	Sensor Motion	☐	☒	☐	10

Settings to be made on Touch Panel UI

The password for the security system must first be set on the Touch Panel UI. For this:

- Go to Touch Panel UI > Settings > Security
- Enter the password which has been determined in the Password section and press the save button.

Dashboard

EAE

KNX IP
 KNX TP

App Settings

Remote

Notification

Security

Security Settings

Enter your 4-digit password to view and control your security system from your screen.

Password

SAVE

1

2 ABC

3 DEF

4 GHI

5 JKL

6 MNO

7 PQRS

8 TUV


9 WXYZ

X

0 +

←


- Activate the options you want to use the password you set.

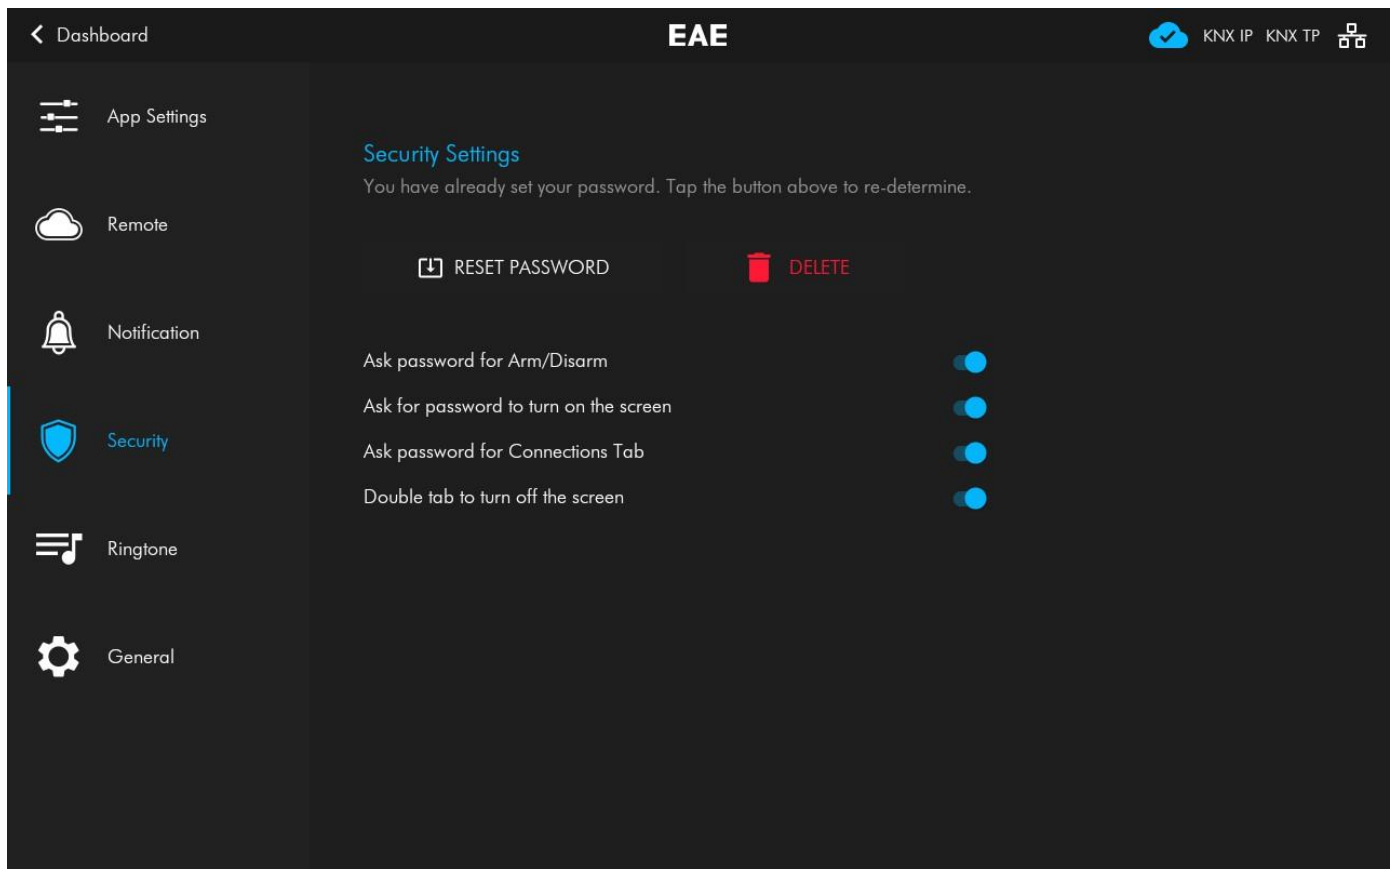

11.4. ADDING IP CAMERA

A new IP Camera is added to Touch Panel in this section. To do this:

- Go to Security > IP Cameras
- Click **+** button
- In the opened page, enter name, icon and room of Camera.
- For the cameras with snapshot feature, enter Snapshot URL, username and password in order to take picture from IP Camera.
- Enter RTSP URL of Camera to get image.
- Turn-on Display in Mobile Application button to display IP Camera image from Miola Mobile App. Enter required IP settings to do this.
- Click Add Action button to perform an action while watching IP Camera. Action types are DTMF command, HTTP request, and an accessory action of Miola operating System.

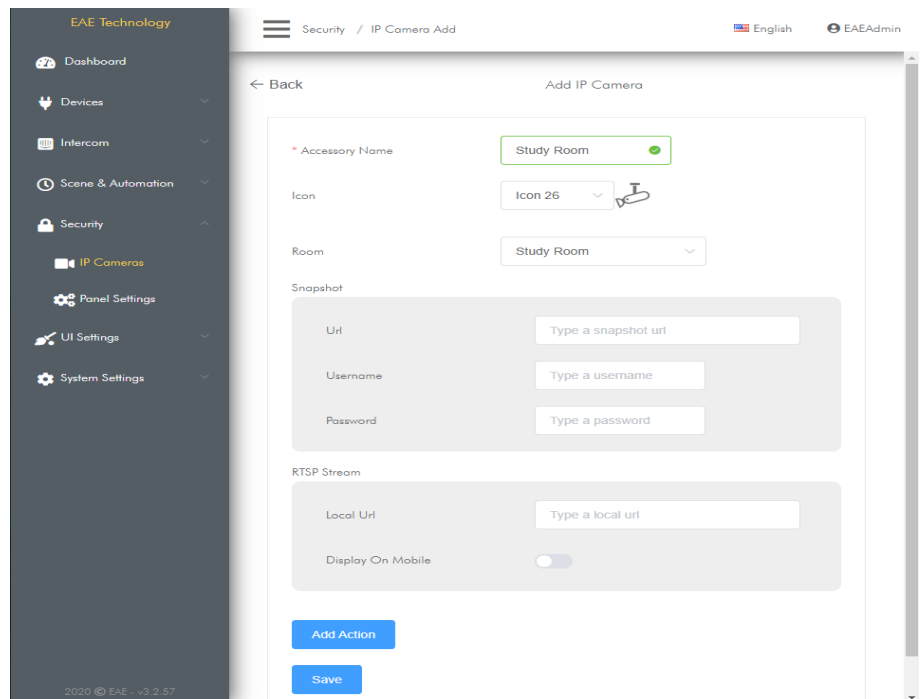

12. INTEGRATOR MENU

12.1. ACTIVATING METHOD

The integrator menu is a hidden menu. to activate it:

- Go to Touch Panel UI > Settings > App Settings.
- Tap 4 times to App Version
- Enter Integrator Password in pop-up window. (Default integrator password is 1234)

12.2. FUNCTIONS

The functions in the integrator menu are as follows:


- ETH0 Ethernet interface can be configured as static IP.
- Siren of the Touch Panel can be activated in case of sensor violations.
- Horizontal or vertical operation of the Touch Panel can be selected.
- The Touch Panel can be restarted.
- The Touch Panel can be reset to factory settings.

13. CREATING USER FOR MOBILE APPLICATION

Touch Panels with Miola 3.3 operating system offer the opportunity to control the automation system from the mobile application, via Miola Cloud system. For this, a user must be defined on the Touch Panel.

To Add a user:

- Go to Touch Panel UI > Settings > Remote.
- Press the + button on the right side of the Touch Panel. You can add an existing user or a new user in the window that appears.

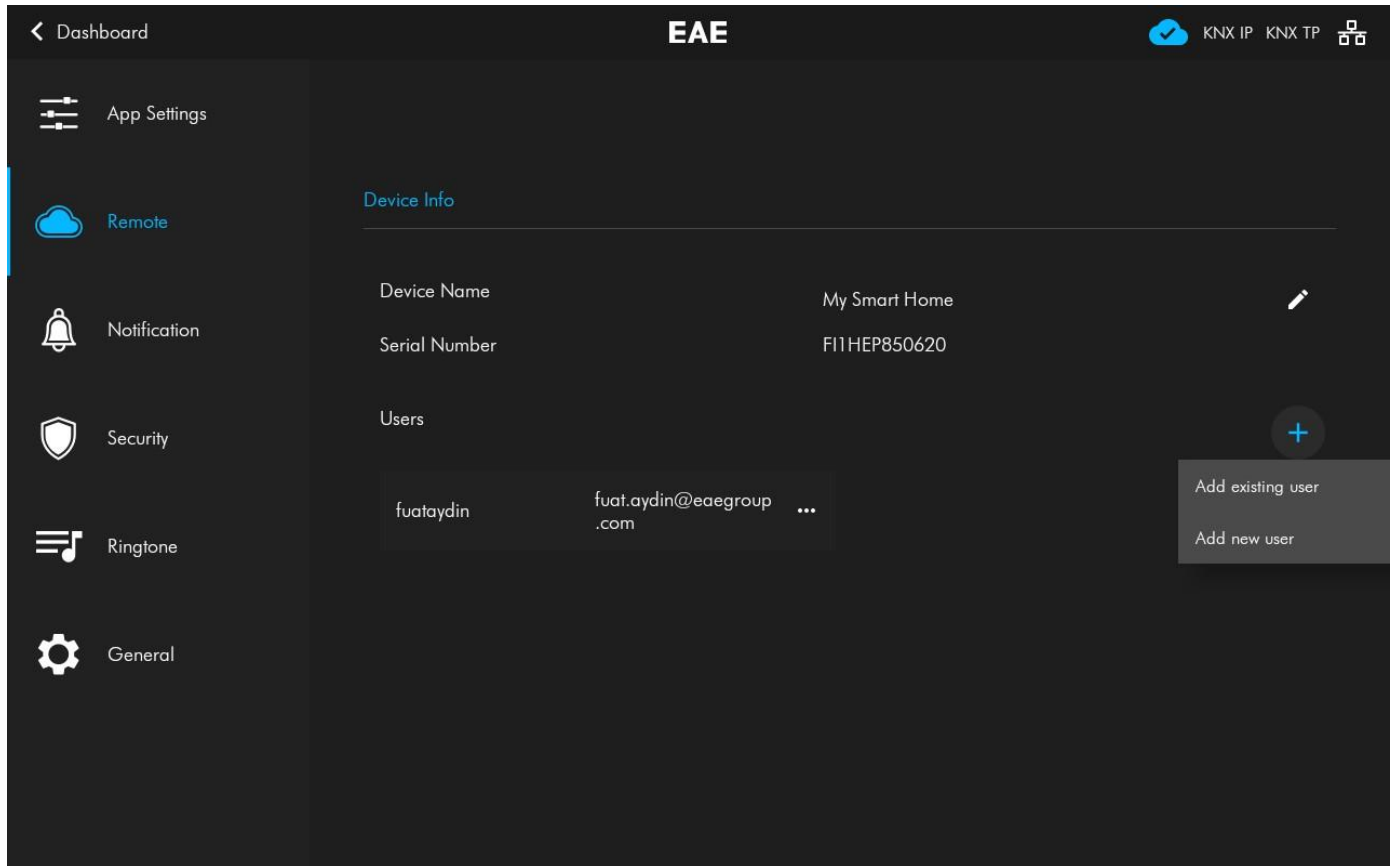

- To add a new user; enter the user's e-mail address (to be used to reset the password), a specific username and password, and click the "Create" button.
- If you want to add a previously created user to the Touch Panel; click add existing user and enter the user name, then click the "Add" button.



Login to mobile application must be done with the **USERNAME**

Dashboard **EAE** KNX IP KNX TP

App Settings

Remote

Notification

Security

Ringtone

General

Back

Create Remote Account

Please enter new user information for remote access

E-mail

Username

Password (Min 6-digit)

Password again (Min 6-digit)

CANCEL CREATE

Adding New User

Dashboard **EAE** KNX IP KNX TP

App Settings

Remote

Notification

Security

Ringtone

General

Back

Add Remote Account

Please enter username to add user to this device

Username

CANCEL ADD

Adding Existing User